


MCC104 4-ch Video Encoder

This manual provides information on installation setup and operation of the video server, as well as troubleshooting tips.

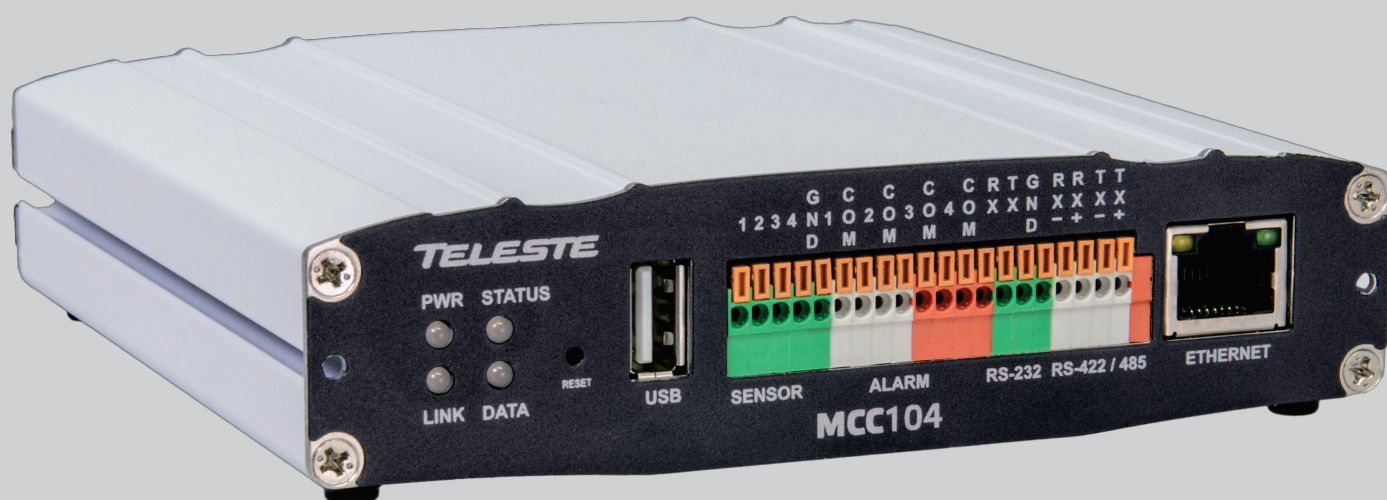

Safety Precautions

- ✓ Make sure the power is turned off before installing MCC104.
- ✓ Make sure to use the product within the temperature range stated in the specification.
- ✓ A recommended installation location is an indoor environment with dry and dust-free conditions.
- ✓ Ensure that the cooling air flow around the product is not prohibited.
- ✓ Do not operate the product in presence of heavy electrical machinery or strong magnetic fields.
- ✓ Do not open the cover of the product in any circumstances.
- ✓ Make sure that voltage is correct before connecting the power on.

Table of Content

1. Introduction	1
About this manual	1
Features	1
Product and Accessories	2
Part names and Functions	3
System Connections.....	5
Topology	5
2. Installation	7
Connecting Audio	7
Connecting Serial Ports.....	7
Connecting Sensor and Alarm.....	7
Connecting Power	7
Check if it Works.....	7
3. System Operation	8
Remote Video Monitoring	8
Video Monitoring using Internet Explorer	8
Video Monitoring with Decoder System	12
Initialize of IP Address	12
4. Remote Configuration	13
Using Web Browser	13
Video & Audio	14
Network	21
Event	32
Record	37
Device.....	42
PTZ	44
User	46
System.....	49
Legal Declarations	55

1. Introduction

About this manual

This user manual provides information on operating and managing the optimal video surveillance system. The manual includes instructions of installation, operation and configuration of 4-ch video server MCC104 as well as how to make troubleshooting.

Features

MCC104 4-ch video server is a video and audio surveillance transmission system based on IP network through LAN, ADSL/VDSL, and Wireless LAN. The 4-ch video server operates as 4 Channel Encoder which compresses and transmits video & audio data through network and provides 4 BNC inputs for connecting analog video devices.

Video

- Highly efficient compression algorithm, H.264 & MJPEG support
- Wide range of transmission rates: 32kbps ~ 16mbps (Up to 4Mbps for each channel)
- Various transmission modes: CBR, VBR, Hybrid
- Motion detection

Audio

- Multi-transmission mode: Simplex
(Encoder → Client PC or Decoder, Client PC or Decoder → Encoder), Full Duplex

Network

- Fixed IP & Dynamic IP (DHCP) support
- 1:1, 1:N support
- Multicasting
- Automatic transmit rate control according to network condition
- OnVIF, PSIA compliant

Serial Data

- Two serial ports
- Data pass-through mode: Serial data communication between Encoder – Decoder

Sensor and Alarm

- Support direct connections of external sensor and alarm device
- Event alarm

USB

- Connection to internal or external USB storage for remote access

User Interface

- Diagnose and upgrade through dedicated program called True Manager
- System configuration using Internet Explorer

High Reliability

- Reliable embedded system
- System recovery by dual watch-dog function

Product and Accessories




MCC104
4-ch Video Server



User Manual CD

Part names and Functions

Front view

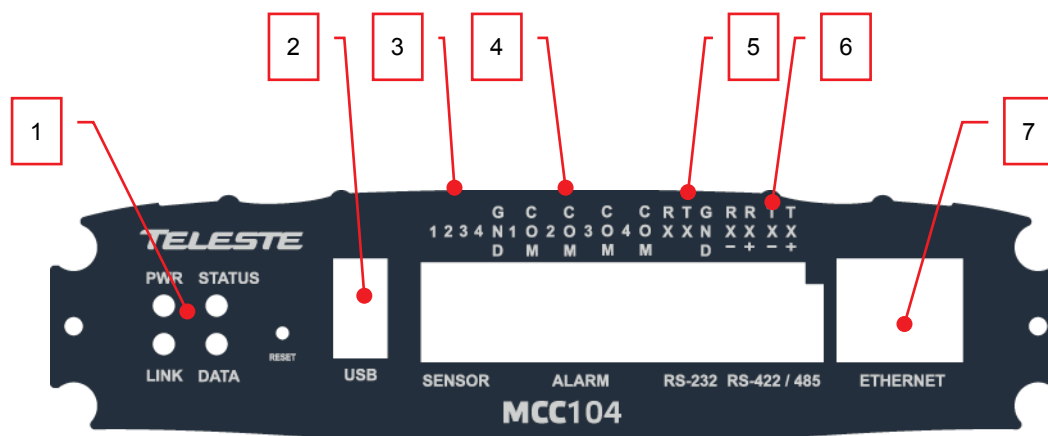

Position	Description	Function
1	LEDs	Display power On/Off condition, Link, Status and data.
2	USB	USB port for any USB device.
3	SENSOR	Sensor input.
4	ALARM	Relay output.
5	RS-232	Serial communication port 1 (COM1) for PTZ control or bi-directional command pass-through.
6	RS-422/485	Serial port 2 (COM2) for PTZ control and etc. Support RS-422 and RS-485 protocol.
7	LAN (Ethernet)	1000/100/10-base-T Ethernet interface.

Rear view



Position	Description	Function
1	POWER IN	DC +12V power input.
2	AUDIO	Audio Input, output.
3	VIDEO IN	4 channels video input.
4	Video Out	Video output.

System Connections

The 4-ch video server system operates as Encoder and can be connected in either 1-to-1 fashion where 4-ch video server is connected one decoder or 1-to-many fashion where 4-ch video server connected to many decoders.


System Mode	Video	Audio	Serial Data
Encoder	Transmit	Transmission/Receive	Transmit/Receive

Therefore, 4-ch video server is capable of bi-directional transmission of audio or serial data.

Topology


Generally, the encoder and the decoder are connected in 1-to-1 mode. To support specific situations, 1-to-many connection is also supported.

- **1:1 Connection (Unidirectional)**

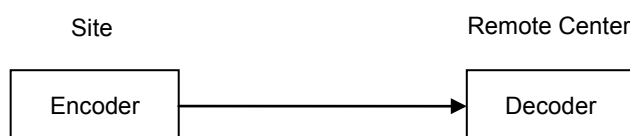

Mostly used configuration is 1 to 1 connection. An encoder is installed at a site where video images can be transmitted and a decoder is installed at a center location to receive and view the video images on analog monitor. Audio and serial data are transferred in either direction.

- **1:N Connection (Unidirectional)**

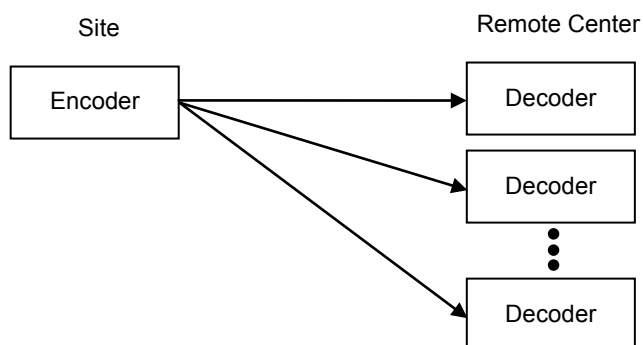


In this configuration, a site can be monitored from many remote center locations. Although up to 64 decoders can be connected to on encoder, in the real network environment, network bandwidth can limit the maximum connections.

Functionally, VMS (Video Management System) software can replace the decoder.

- **Multicast Mode**


In 1:N Connection, network that supports multicasting, a large number of decoders can receive video efficiently from an encoder transmit a single streaming of video and audio.

- **Relaying**

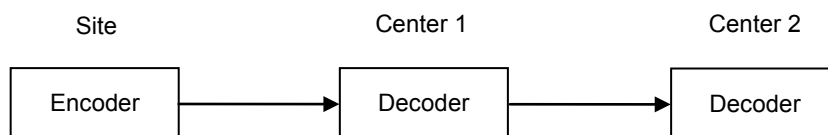

In this arrangement, video and audio can be retransmitted from a center to another center. The arrangement is useful when the network bandwidth to the site is limited while there is more than one center wanting to monitor the site.

- **VMS (Video Management System)**

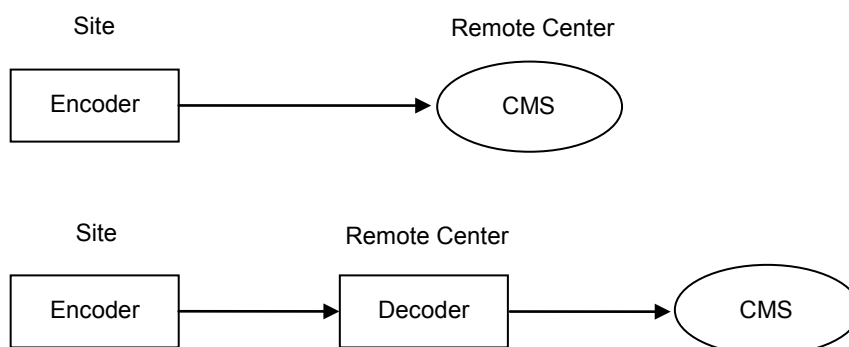

VMS is a Windows based remote monitoring program to access multiple encoders for real-time monitoring or control of the encoders and connected cameras. Please refer to VMS documentation for more information.

2. Installation

Connecting Network (LAN)

- Connect the power adaptor to encoder.
- Connect network cable to Ethernet port.
- To display video through composite port, after connecting each port to a monitor, set **preview** option “ON” on the web-viewer page.

Connecting Audio

Audio is full-duplex. It is possible to set the mode as Tx-only, Rx-only or Tx-Rx.

- Connect audio input and output port to audio device accordingly.
- The audio signal required is line level so audio equipment with an amp, mixer or other amplifier should be used.

Connecting Serial Ports

RS-485 for the camera can be connected to external equipment such as PTZ receiver etc. PC client can send PTZ commands to the external equipment via the serial port.

When a decoder system is connected to encoder, the serial port and that of the decoder system works in pass-through mode. That is, data from one port is delivered to the other port, vice versa.

Connecting Sensor and Alarm

Connect sensors and alarm devices to corresponding terminals accordingly.

Connecting Power

After confirming the power source, connect power adaptor and connect the 12VDC connector to the encoder.

Check if it Works

Once the power is supplied to the device, encoder will start booting. Boot up to an operating mode will take approximately 40-60 seconds. The green LED on the Ethernet port will flash indicating the encoder is ready.

3. System Operation

Remote Video Monitoring


There are two ways to monitor video either via Web Browser or a hardware decoder. In order for a proper operation, an IP address must be set accordingly.

Default ID	admin
Default Password	1234


Video Monitoring using Internet Explorer

Open Internet Explorer and enter encoder IP address (default address is shown below). The system will ask for confirmation to install Active-X control. Once authorized, the Internet Explorer will start to display video images from encoder as shown below.

Default IP Address : <http://192.168.10.100>

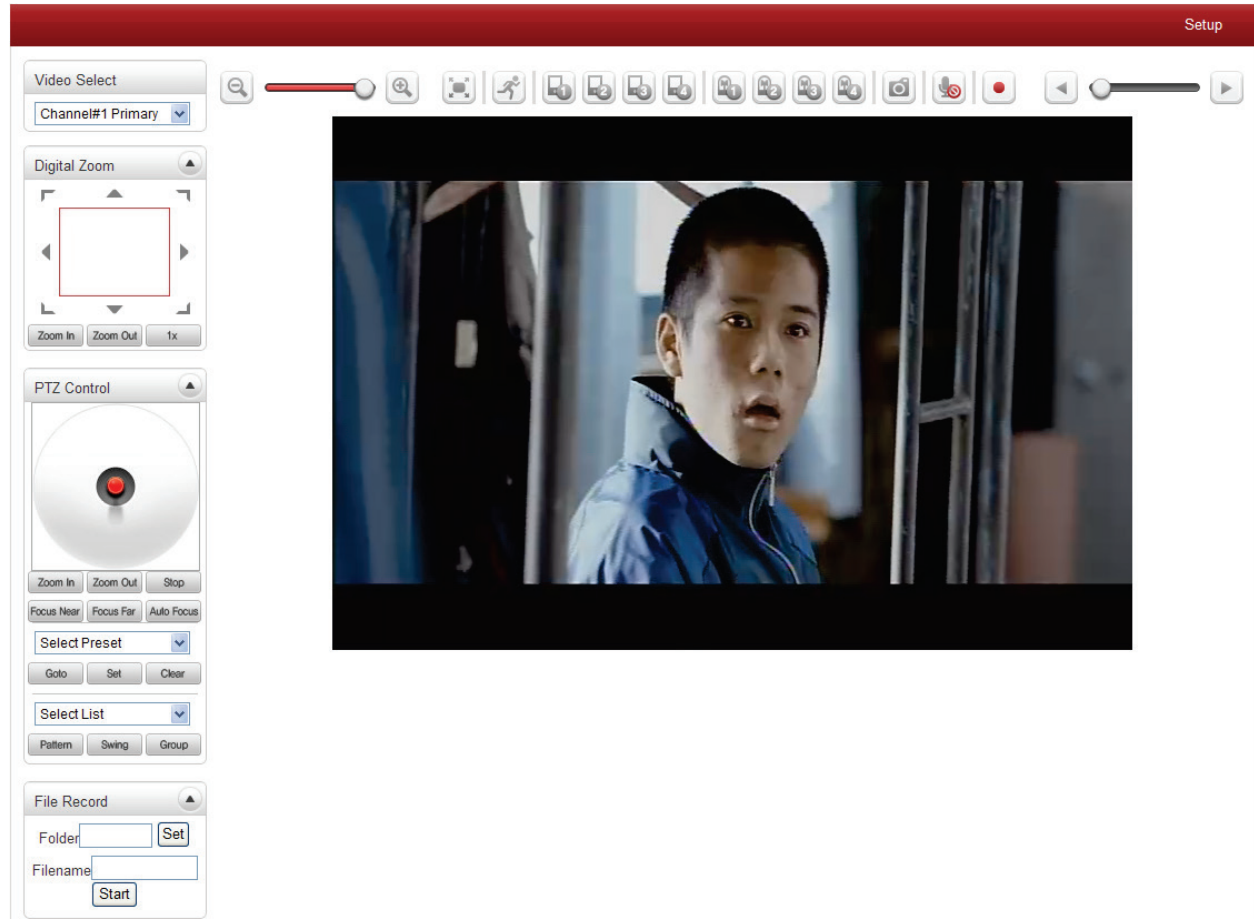

Video Select

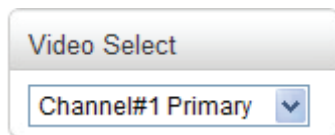

Select the Video stream to be viewed: Primary, Secondary, Quad steam tertiary or quartic streaming.

The encoder is capable of dual streaming; primary streaming and secondary streaming.

Video will be displayed according to the resolution set on video configuration. If dual streaming ("Use Dual Encode" Menu in Video page) is not activated, secondary video is not available


View Size



Adjust the size of the screen.

Screen size if initially adjusted according to the compression resolution. Click on 50% icon and the whole screen size will be reduced to half size.


Digital Zoom

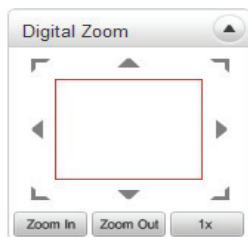

Control the Digital zoom on the screen.

The more the camera zooms in, the smaller the square of control panel is. Position of the image can be changed by moving position of the square. If you press x1, the screen will return to the normal size.


PTZ Control (Optical Zoom & Digital Zoom Built-in the Camera)

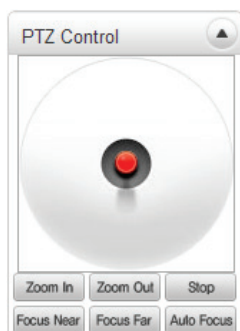

Control PTZ and PTZ Control Panel is used for controlling external PTZ devices when the external PTZ devices are connected through serial port. It is possible to make zooming control by **Zoom in/out** buttons of PTZ control Panel (In order to use digital zoom, select **Digital zoom ON** in the Camera tab)

- **Stop**
Stop on-going action.
- **Focus Near, Focus Far, Auto Focus**
Adjust the focus of the lens.

Select Preset

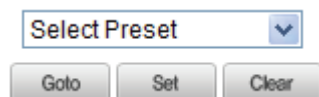

Set preset position and move to the specific preset position.

- **Goto**
Move to the selected preset entry if the preset entry is set.
- **Set**
Set the current position to the selected preset entry.
- **Clear**
Delete the selected preset entry.

Sensor Input and Alarm Output



Display the status of the sensor in real time.

This camera supports one sensor input. When the sensor of the camera is working, the sensor light turns red

Operate the alarm device by pressing the number icon. This camera supports one alarm output. A number icon indicates status of the alarm device.

Snapshot




Capture video images and store them as BMP or JPEG files.

Talk



Transfer audio from PC's mic to the camera.

File Record

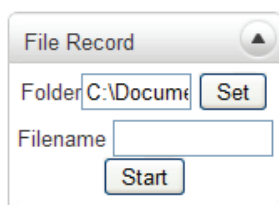

Recording to an AVI file on Live View page is available. AVI files are generated in the specified folder or in a specified file name on the PC where web browser is running.

1. Press **“Set”** button to select a folder or create a new folder. Enter the file name on a filename field.
2. Press **“Start”** button to start recording.
3. Press **“Stop”** button to stop recording.
4. An AVI file named **“IP address_hh_mm_ss”** or **“File name_IP address_hh_mm_ss”** will be generated in the specified folder depending on where the path specified folder or a prefix of the file name.

Display Buffer



Set the number of video frames to be buffered before being displayed on web browser. Larger value results in smoother video by sacrificing the latency. A setting of 10 ~ 15 frames can be used generally for most situations.

Video Monitoring with Decoder System

Once encoder IP address is set in the remote IP address section of the decoder, the decoder system will connect to camera and start receiving the video images. Normally, a monitor connected to the decoder will display video images

Initialize of IP Address

If a system IP address is lost, the system can be reset back to the factory default IP address using the reset button in the back side of the system.


1. While the system is in operation, press the reset button for more than 5 seconds.
2. The system will reboot automatically.
3. Once the system reboots, IP address will be set to the system default as below;

• IP mode	Fixed IP	• IP address	192.168.10.100
• Subnet mask	255.255.255.0	• Gateway	192.168.10.1
• Base port	2222	• HTTP port	80

4. Remote Configuration

Using Web Browser


Remote setting is available by using web browser. Enter IP address of camera and then a live view screen appears as below. Press **Setup** button located in the upper right area of the monitoring screen to go to the server setup. For Remote Setting, user should be authorized higher than manager level.

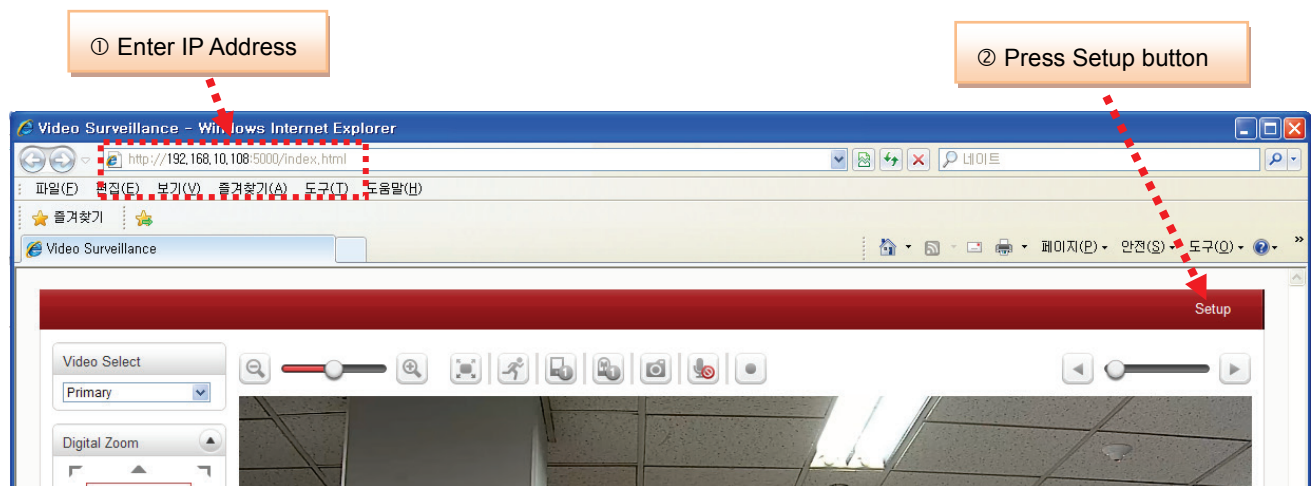

The configurations are grouped into 9 categories: **Video & Audio, Image, Network, Event, Record, Device, PTZ, System, User**. Leaving the page without pressing **Apply** button, any changes in the page will be discarded.

Video & Audio

Information

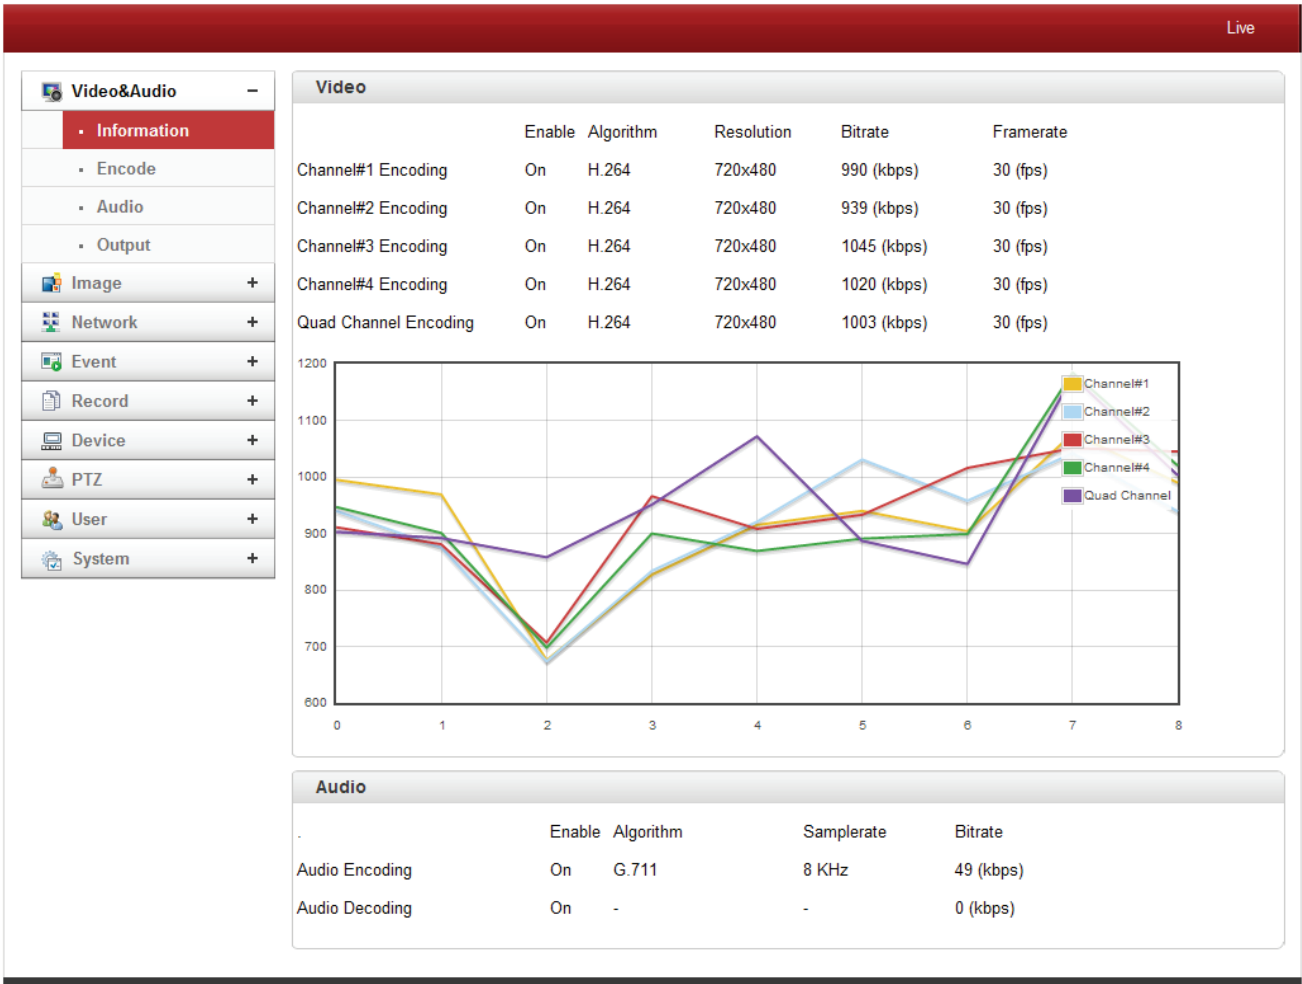

The information provides current information regarding the settings for video and Audio.

Encode

Video&Audio

Information

Encode

Audio

Output

Image

Network

Event

Record


Device

PTZ

User

System

View



Encode

Input Format Composite NTSC

Channel #1

Channel #2

Channel #3

Channel #4

Quad Channel

Primary

Resolution 720x480

Framerate 30

Preference CBR

Quality Economy

Bitrate 1024 kbps (32 ~ 4000)

I-Frame Interval 30

H.264 Profile High Profile

Secondary

Enable ☐ Off ☒ On

Algorithm ☒ H.264 ☐ MJPEG

Resolution 720x480

Framerate 30

Preference CBR

Quality Economy

Bitrate 1024 kbps (32 ~ 1024)

I-Frame Interval 30

H.264 Profile High Profile

Apply

- **Input format**

Select channel and video input format.

- **Resolution**

Select video encoding solution. **Scaling** option is used when encoding resolution is different from input resolution. Without Scaling option, input video will be cut according to encoding resolution.

On the other hand, if Scaling is selected, input video will be adjusted according to encoding resolution.

- **Frame rate**

Determine the maximum number of frames per second for the video stream.

1,2,3,4,5,6,8,10,15,20,25,30 and 60 frame rate can be selected. The actual frame rate of video can be less than the maximum frame rate set due to the network bandwidth limitation.

- **Preference**

Select encoding mode to control video quality or bitrate: Quality (VBR) or Bit rate (CBR).

If '**Bitrate**' selected, the video encoding will be effected by the 'Bitrate' value entered. Therefore, "Bitrate" mode corresponds to CBR (Constant Bit rate) encoding. If '**Quality**' selected, the video encoding will be effected by the quality of image selected. Therefore, "Quality" mode corresponds to VBR (Variable Bit Rate) encoding.

- **Quality**

Select Video quality. 7 levels of quality are available. Quality mode (VBR encoding) tries to encode every frame in a constant quality. Therefore, resulting bitrate may vary a lot depending on the complexity or activity changes in the input video. It is preferred when constant video quality is required and network bandwidth is enough for delivering the stream of highly varying bitrate.

- **Bitrate**

Determine bitrate value between 32 ~ 16Mbps.

Bitrate mode (CBR encoding) allows you to set a fixed target bitrate that consumes a predictable amount of bandwidth. In order to keep the bitrate limit, video quality is controlled dynamically according to the complexity or activity changes in the input video.

- **I-Frame Interval**

Determine I-frame Interval between 1 and 255.

- **H.264 Profile**

Select H.264 Profile: **High Profile** or **Baseline Profile**.

The standard defines various sets of capabilities which are referred to as profiles, targeting specific classes of application.

- I. **High Profile**

The Primary profile for broadcast and disc storage applications, particularly for high-definition television application.

- II. **Baseline Profile**

Primarily for low-cost applications that require additional data loss robustness, this profile is used in some videoconferencing and mobile application. This profile includes all features that are supported in the constrained baseline profile, plus three additional features that can be used for loss robustness.

- **Use Dual Encode**

Select **ON** to enable to use Secondary The Secondary video can be viewed on **Live View** window by selecting **Stream number** on Video selection

- **Algorithm**

Select H.264 or MJPEG for the secondary, tertiary or quartic streaming. In case of H.264, wither bitrate mode or Quality mode can be selected for Preference mode in. On the other hand, MJPEG supports **Quality** mode

- **Quad Channel**

The screenshot shows a video configuration window with five tabs: Channel #1, Channel #2, Channel #3, Channel #4, and Quad Channel. The 'Quad Channel' tab is selected. Below the tabs is a 'Primary' configuration panel. Inside this panel, the following settings are visible:

- Resolution:** 720x480 (dropdown menu)
- Framerate:** 30 (dropdown menu)
- Preference:** CBR (dropdown menu)
- Quality:** Economy (dropdown menu)
- Bitrate:** 1024 kbps (32 ~ 4000) (text input)
- I-Frame Interval:** A slider bar ranging from 1 to 30, currently set at 30.
- H.264 Profile:** High Profile (dropdown menu)

Audio

The screenshot shows the 'Audio' configuration page. The sidebar on the left lists various system settings, with 'Audio' currently selected. The main configuration area is divided into three sections: 'Encode', 'Mode', and 'Input Gain'. In the 'Encode' section, the 'Algorithm' is set to 'G.711' and the 'Bitrate' is set to '64kbps'. In the 'Mode' section, the 'Mode' is set to 'Tx & Rx'. In the 'Input Gain' section, the 'Input Gain' is set to 25. Each section has an 'Apply' button to save the changes.

- **Algorithm**

Select the audio algorithm: G.711 or AAC. G.711 and AAC from client to server direction are supported. Thus, bidirectional audio communication is supported.

- **Bit rate**

Select the bitrate between 64Kbps and 128kbps when AAC is selected. The sampling rate is fixed to 8KHz and 32KHz for G.711 and AAC respectively.

Note! When camera is connected to a decoder, the decoder's audio algorithm should be set identically to transmit audio properly.

- **Mode**

Select audio operation mode:

Mode	Action
Off	No operation
Tx-Only	Transmit only
Rx-Only	Receive only
Tx & Rx	Transmit and Receive

- **Input Gain**

Set audio input gain from 0 to 31.

Output

The screenshot shows a web-based configuration interface for video and audio settings. On the left is a sidebar menu with categories: Video&Audio (expanded), Information, Encode, Audio, Output (selected), Image, Network, Event, Record, Device, PTZ, User, and System. The main panel is divided into two sections: Video and Audio. The Video section has a 'Preview Option' dropdown menu set to 'Quad Channel' and an 'Apply' button. The Audio section has 'Audio Output' radio buttons for 'Decoded Audio' (selected) and 'Loopback', with an 'Apply' button.

Live

Video&Audio -

- Information
- Encode
- Audio
- Output**
- Image +
- Network +
- Event +
- Record +
- Device +
- PTZ +
- User +
- System +

Video


Preview Option: Quad Channel [v] [Apply]

Audio

Audio Output: ☒ Decoded Audio ☐ Loopback [Apply]

- **Output Format**
Select the format of output when Enable Preview is selected.
- **Audio Output**
Audio Output: The input audio is transmitted to the encoder.
Loopback: Does not transmit the audio to the encoder. Audio input and output at the camera.

Image

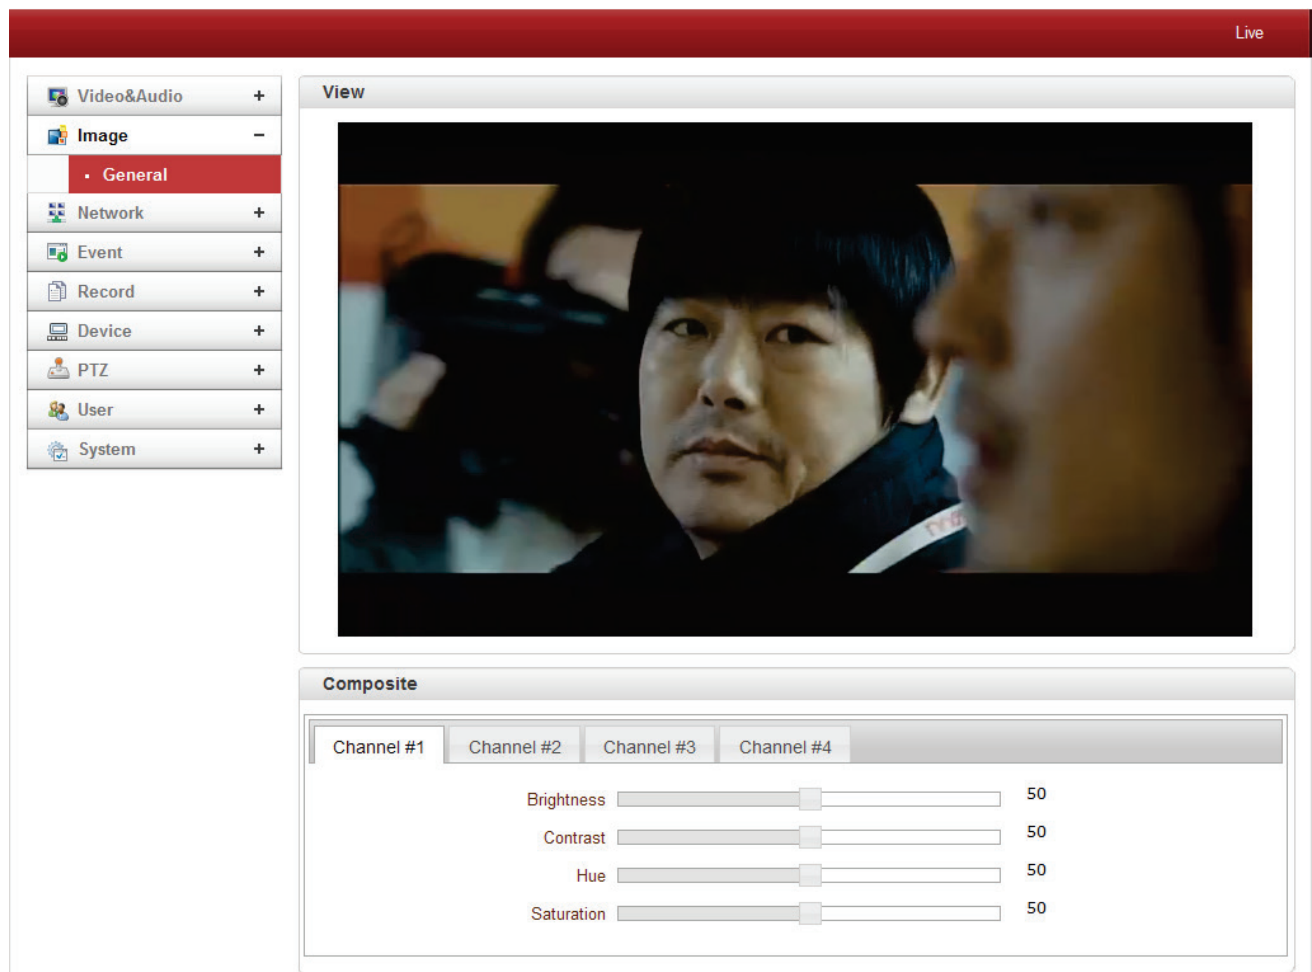

General

- **Video Output**

Brightness: Controls input video brightness by selecting values between 0 and 100.

Contrast: Controls input video contrast by selecting values between 0 and 100.

HUE: Controls input video Hue by selecting values between 0 and 100.

Saturation: Controls input video saturation by selecting values between 0 and 100.

Network

IP & Port

Video&Audio +

Image +

Network -

IP&Port

Discovery

SNMP

DDNS

IP filtering

E-mail

FTP

SSL

Event +

Record +

Device +

PTZ +

User +

System +

Local

IP Mode Fixed IP

Local IP 192.168.32.112

Local Gateway 192.168.10.1

Local Subnet 255.255.0.0

DNS

Obtain DNS server address automatically

Use the following DNS server addresses

Primary DNS Server 0.0.0.0

Secondary DNS Server 0.0.0.0

IPv6

IPv6 Address

IPv6 Subnet Prefix Length 0

IPv6 Default Gateway

IPv6 LinkLocal fe80::21c:63ff:feaa:458/64

Port

Base Port 2222 (1025~65535)

HTTP Port 80 (80, 1025~65535)

HTTPS Port 443 (443, 1025~65535)

RTSP Port 554 (554, 1025~65535)

Multicast

Multicast IP 224.10.0.0 (224.0.0.0 ~ 239.255.255.255)

TTL 64 (1~255)

Apply

- Local

Select the IP mode: Fixed IP or DHCP.

Depending on the selected mode, further configuration items comes as follows,

IP Mode	Selection	Description
Fixed IP	Local IP	Fixed IP address
	Local Gateway	Gateway IP address
	Local Subnet	Subnet mask
DHCP	N/A	

Please ask IP address information from ISP provider or network manager.

- **DNS**

- **Obtain DNS server address automatically**

Get DNS server address automatically when IP mode is DHCP.

- **Use the following DNS server address**

Enter the DNS server IP address; Primary or Secondary DNS server

Domain Name System (DNS) is a database system that translates a computer's fully qualified domain name into an IP address. Networked computers use IP addresses to locate and connect to each other, but IP addresses can be difficult for people to remember. For example, on the web, it's much easier to remember the domain name `www.amazon.com` than it is to remember its corresponding IP address (`207.171.166.48`). Each organization that maintains a computer network will have at least one server handling DNS queries. That server, called a name server, will hold a list of all the IP addresses within its network, plus a cache of IP addresses for recently accessed computers outside the network.

- **IPv6**

- **Ipv6 Address:** Enter the designated Ipv6 address.

- **Ipv6 Subnet Prefix Length:** Enter the bit number of Ipv6 Subnet.

- **Ipv6 Default Gateway:** Enter the designated Ipv6 gateway.

- **Ipv6 Link Local:** Display Ipv6 Link Local.

- **Port**

- **Base Port (1025~65535)**

Enter the Base Port number.

Network base port is used for communication with remote clients. In order for camera and remote systems to be connected, the port number must be identically configured in camera side and client side.

- **HTTP Port (80, 1025~65535)**

Enter HTTP port used for web-based connection.

- **HTTPS Port (443, 1025~65535)**

Enter HTTPS port used secured HTTP connection.

- **RTSP Port (554, 1025~65535)**


Enter RTSP port used for RTSP-based connection. The default TRSP port is 554.

RTSP (Real Time Streaming Protocol) is a standard for media streaming between server and client.

- **Multicast**

The Multicast menu is used for configuring the multicast IP address to which media stream is delivered when a client such as a Decoder, VMS or NVR software is connected in multicast mode. The multicast IP address selection range is between 224.0.0.0 and 239.255.255.255. The selection can be used only when media protocol is set to Multicast.

Discovery

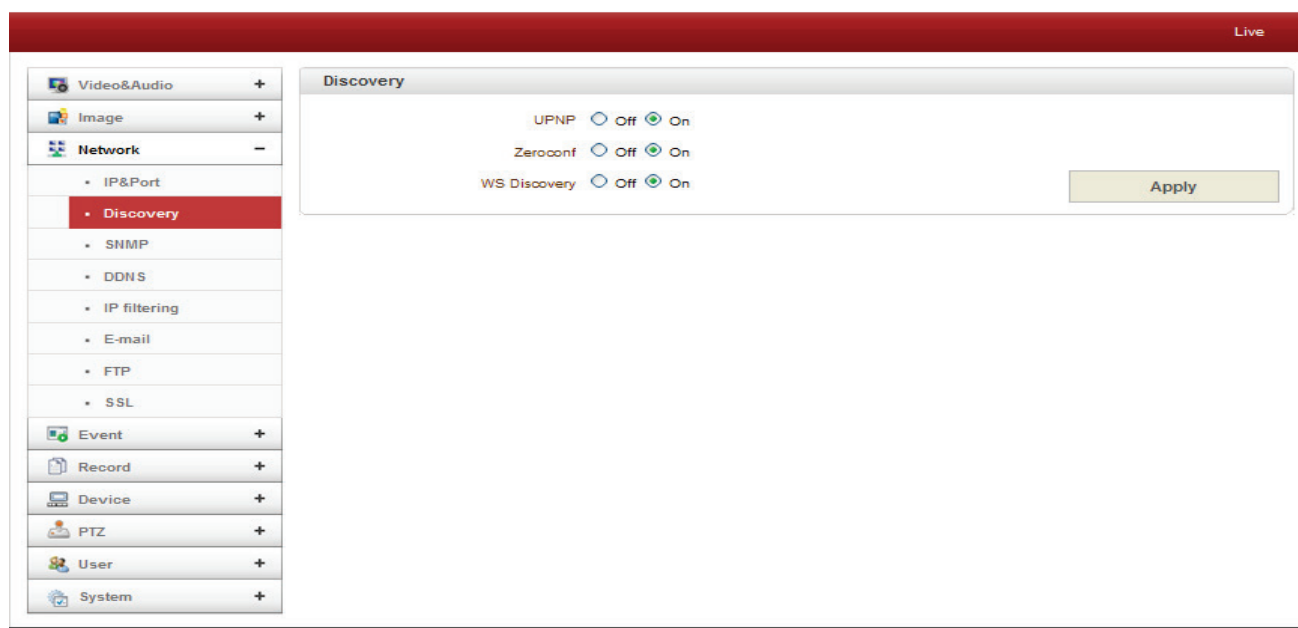

- **UPNP**

By the setting **UPNP** to ON, it allows the discovery by the clients according to UPNP (Universal Plug and Play) protocol.

- **Zeroconf**

By setting **Zeroconf** to ON, it allows the discovery by the clients according to zeroconf protocol.

- **WS Discovery**

Discovery function based on web service is enabled. It allows the discovery by the client SW which is supporting Onvif.

SNMP

Live

Video&Audio +

Image +

Network -

- IP&Port
- Discovery
- SNMP**
- DDNS
- IP filtering
- E-mail
- FTP
- SSL

Event +

Record +

Device +

PTZ +

User +

System +

SNMP

SNMP Listen Port (0, 161, 1025~65535)

SNMP Trap Destination IP


SNMP Trap Destination Port (0, 162, 1025~65535)

Setup for using SNMP (Simple Network Management Protocol). It is compatible to both SNMPv1 and SNMPv2c. Settings for using SNMP are as following;

- **SNMP Listen Port (0, 161, 1025 ~ 65535)**
The port is for connecting external device when system operates as a SNMP client.
SNMP is not used by setting 0 value.
- **SNMP Trap Destination IP**
Set the SNMP Trap Destination IP.
- **SNMP Trap Destination Port (0, 162, 1025 ~ 65535)**
Set the SNMP Trap Destination Port. SNMP is not used by setting 0 value.

Simple Network Management Protocol (SNMP) is used by network management systems to communicate with network elements. SNMP lets TCP/IP-based network management clients use a TCP/IP-based internetwork to exchange information about the configuration and status of nodes. SNMP can also generate trap messages used to report significant TCP/IP events asynchronously to interested clients. For example, a router could send a message if one of its redundant power supplies fails or a printer could send an SNMP trap when it is out of paper.

DDNS

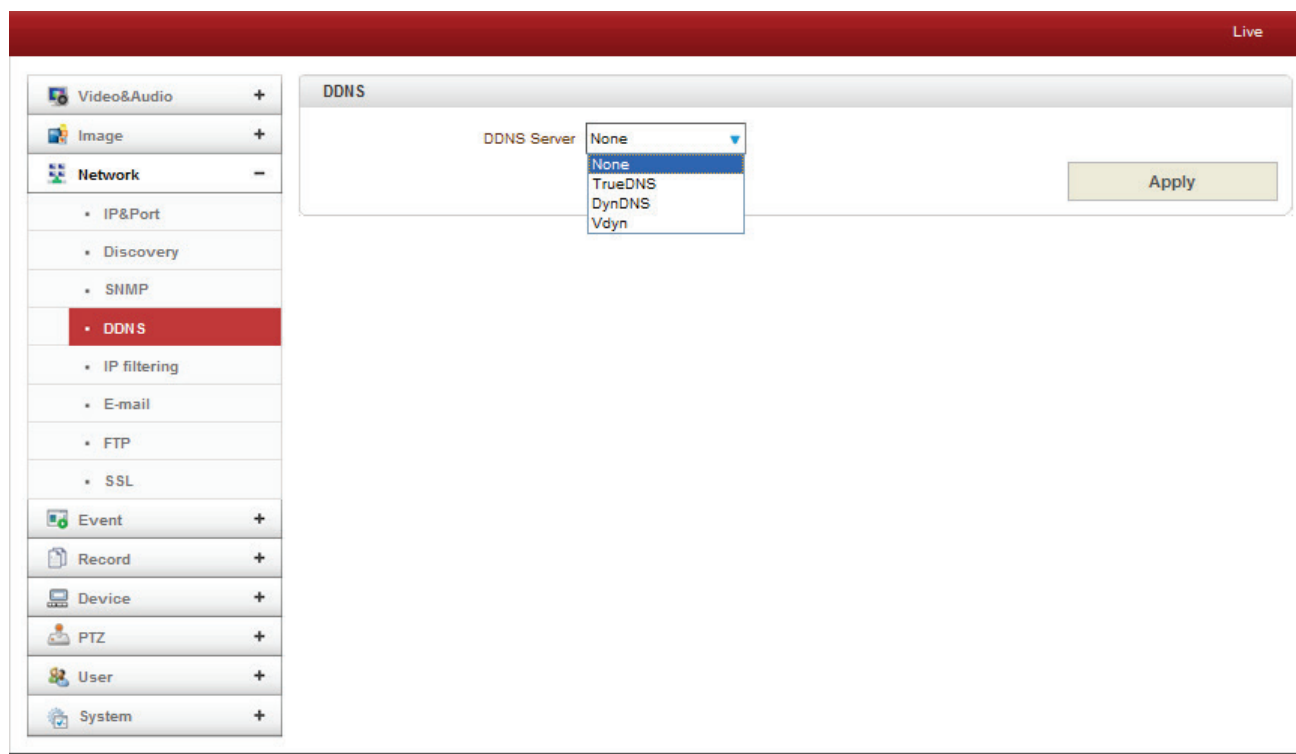

Select DDNS (Dynamic DNS) server to use. One of the two can be selected:

- **TrueDNS**

True DNS service is used in the mode. Systems can be registered on the website for True DNS service, <http://ns1.truecam.net>. A system will get a domain name of xxx.truecam.net. Please refer to user guide document for True DNS service.

- **DynDNS**

Dyn DNS service is used in this mode. Refer to www.dyndns.org for details. ID, Password and Domain name are needed when DYN DNS is set.

Dynamic DNS is a method, protocol, or network service that provides the capability for a networked device, such as a router or computer system using the Internet Protocol Suite, to notify a domain name server to change, in real time (ad-hoc) the active DNS configuration of its configured hostnames, addresses or other information stored in DNS.

- **Vdyn**

Vdyn is a DDNS service provided by Visionica (<http://visionica.com>). No further configuration is required for using this service. It internally uses MAC address for the registration. When it succeeds, the domain name of the form 001C63A607EC.visionica.info is displayed on Current Domain entry of Network page. E-mail setting is not mandatory.

- **Check IP Disable**

If “Check IP Disable” is selected, it will skip to check its own IP. In fixed IP mode, the set IP will be registered on DDNS server. In DHCP mode, dynamically assigned IP will be registered on DDNS server. Normally **Check IP Disable** should be unchecked in order to obtain public IP in the network.

IP filtering

live

Video&Audio +

Image +

Network -

- IP&Port
- Discovery
- One-way
- SNMP
- DDNS
- **IP filtering**
- E-mail
- FTP

Event +

Record +

Device +

PTZ +

System +

User +

IP Filtering Setup

Basic Policy: Allow all

Below IP list is not allowed to access.

No.	From	To	Enable
1	0.0.0.0	0.0.0.0	<input type="checkbox"/>
2	0.0.0.0	0.0.0.0	<input type="checkbox"/>
3	0.0.0.0	0.0.0.0	<input type="checkbox"/>
4	0.0.0.0	0.0.0.0	<input type="checkbox"/>
5	0.0.0.0	0.0.0.0	<input type="checkbox"/>
6	0.0.0.0	0.0.0.0	<input type="checkbox"/>
7	0.0.0.0	0.0.0.0	<input type="checkbox"/>
8	0.0.0.0	0.0.0.0	<input type="checkbox"/>
9	0.0.0.0	0.0.0.0	<input type="checkbox"/>
10	0.0.0.0	0.0.0.0	<input type="checkbox"/>
11	0.0.0.0	0.0.0.0	<input type="checkbox"/>
12	0.0.0.0	0.0.0.0	<input type="checkbox"/>
13	0.0.0.0	0.0.0.0	<input type="checkbox"/>
14	0.0.0.0	0.0.0.0	<input type="checkbox"/>
15	0.0.0.0	0.0.0.0	<input type="checkbox"/>
16	0.0.0.0	0.0.0.0	<input type="checkbox"/>
17	0.0.0.0	0.0.0.0	<input type="checkbox"/>
18	0.0.0.0	0.0.0.0	<input type="checkbox"/>
19	0.0.0.0	0.0.0.0	<input type="checkbox"/>
20	0.0.0.0	0.0.0.0	<input type="checkbox"/>

Apply

IP filtering is simply a mechanism that decides which types of IP datagrams will be processed normally and which will be discarded.

E-mail

The screenshot shows the 'E-mail' configuration page. On the left is a sidebar with categories: Video&Audio, Image, Network (expanded), Event, Record, Device, PTZ, System, and User. The 'Network' category is expanded, showing sub-items: IP&Port, Discovery, One-way, SNMP, DDNS, IP filtering, E-mail (selected), and FTP. The main area has two sections: 'E-mail' and 'E-mail Notification'. The 'E-mail' section contains fields for Server Address, Port (25), Sender Address, Authentication on SMTP server (Off/On), ID, Password, SSL (Disable/Enable), and Destination Address. An 'E-mail Test' button is at the bottom right of this section. The 'E-mail Notification' section contains a dropdown for Video Clip Attaching (Disable), a field for Number of Frame (1), and a dropdown for Capture Interval (Skip 1 frame). An 'Apply' button is at the bottom right of this section.

- **E-mail**

Specify the information to send event information, when E-mail is selected as an event action.

- **Server Address**

Enter an address of mail (SMTP) server.

- **Port**

Specify a port for SMTP operation (**Port 25 is the default port in SMTP operation**. If a different port is configured in the SMTP server, this ports needs to be changed accordingly.).

- **Sender Address**

Enter an account registered in SMTP server.

- **Authentication on SMTP server**

This function is applicable when the E-mail server requires authentication for sending E-mail.

- **ID & Password**

When the server requires authentication, ID and Password of an E-mail account need to be entered.

- **SSL**

This function is applicable when the E-mail server requires encryption for sending E-mail.

- **Destination Address**

Enter Destination address. More than one address can be entered by delimiting comma (,) or semi-colon (;). Destination address can take up to 63 characters.

- **E-mail Test**

E-mail sending can be tested with this button. Please note that configured settings should be saved first by pressing **Apply** button before using E-mail Test function. One of the following messages will come as a result of the test.

Message↗	Description↗
E-mail sent successfully↗	Test E-mail has been sent successfully. Reception in the client can be checked.↗
Failed to connect SMTP server↗	Connection to the SMTP server failed. It is necessary to check if the server is reachable and server address and port are correct.↗
Authentication failed↗	The server is reachable but authentication failed. ID and/or password need to be checked.↗
SMTP server rejected the mail↗	The server is reachable, but mail sending failed due to a reason other than authentication. This error happens often when the server authenticates according to its own rule. For example, IP addresses of a specific range or addressed of a specific suffix are allowed.↗

- **E-mail Notification**

- **Video Clip Attaching**

Video clip stored at the moment of event can be attached as an AVI or JPEG file format.

When dual encoding is enabled, **Primary video**, **Secondary video** (H.264 only) or **JPEG**

Capture can be selected. The number of JPEG frames is configured. This setting is applicable only when **JPEG Capture** is selected.

- **Capture Interval**

Select the interval of captured frame.

FTP

The screenshot shows a web management interface for configuring FTP settings. On the left is a sidebar with a tree view containing categories like Video&Audio, Image, Network, Event, Record, Device, PTZ, System, and User. The 'Network' category is expanded, and 'FTP' is selected. The main content area is divided into two panels. The top panel, titled 'FTP', contains fields for 'Server Address' (192.168.26.223), 'Port' (21), 'ID' (djehe), 'Password', 'FTP Filename', and 'FTP Base Directory', along with an 'FTP Test' button. The bottom panel, titled 'FTP Upload', contains fields for 'Upload Video' (Primary Video), 'Number of Frame' (1), 'Capture Interval' (Skip 1 frame), 'Continuous Upload' (Off), 'Upload Duration' (10 sec), and 'Upload Interval' (300 sec), along with an 'Apply' button.

Specify the information to upload event information, when FTP is selected as an event action.

- **FTP**

- **Server Address**

Enter an address of an RTP server to receive video files.

- **Port**

Specify a port for FTP operation (port 21 is the default port in FTP operation. If a different port is configured in the FTP server, this port needs to be changed accordingly.)

- **ID & Password**

Enter ID and password for accessing the FTP server.

- **FTP file name**

The names of files upload by FTP can be specified by user.

If a fixed name is specified, the file is overwritten repeatedly. Max length of a file name is 60 characters. If the name is left blank, file name is determined according to the internal rule implemented in the firmware.

The following macros are supported to form variable parts of file names. The strings are case-sensitive.

- %YYYY : year
- %MM : month

- %DD : day
- %hh : hour
- %mm : minute
- %ss : second
- %EVENT : event type (Sensor1, Motion, ...)
- %ADDR : address of the server

(Domain name when DDNS is used. Otherwise IP address)

“.avi” or “.jpg” will be added automatically at the end of the filename depending on the type of video file.

- FTP Base Directory

Specify the name of the directory to be created in the FTP server. It is valid only when Use Record is set to Use on Record session.

- FTP Test

FTP upload function can be tested with this button. Please note that configuration settings should be saved first by pressing **Apply** button before using FTP test function. One of the following messages will appear as a result of the test.

Message [↗]	Description [↗]
FTP connection tested successfully [↗]	The connection to the FTP server is successful. [↗]
Failed to connect FTP server [↗]	The connection to the FTP server failed. It is necessary to check if the server is reachable and server address and port are correct. [↗]
Authentication failed [↗]	The server is reachable but authentication failed. ID and/or password need to be checked. [↗]
Failed to upload file [↗]	File upload failed. The user of the ID is not allowed for writing into the directory or FTP server can be full. [↗]
Failed to erase file [↗]	Failed to delete the test file. The user of the ID doesn't have the privilege for file deletion. [↗]

- **FTP Upload**

- Upload Video


Primary video and secondary, tertiary or quartic video (H.264 only), JPEG capture can be selected for uploading.

- Number of Frame

Enter frame number of JPEG capture. (1 ~ 10).

- Capture Interval
Select the interval of captured frame.
- Continuous Upload
Continuous upload 'ON' allows video clips to be transmitted regularly regardless of occurrence of event. When this mode is activated, FTP upload by event is suppressed.
- Upload Duration
Specify recording duration of a video clip to be transmitted. (max 300 sec.)
- Upload Interval
Specify transmission interval. (max 3600 sec.)
Upload duration is not included in upload interval. For example, if upload interval is 60 sec. and upload duration is 20 sec, a video clip for 20 sec is transmitted every 80 sec.

SSL

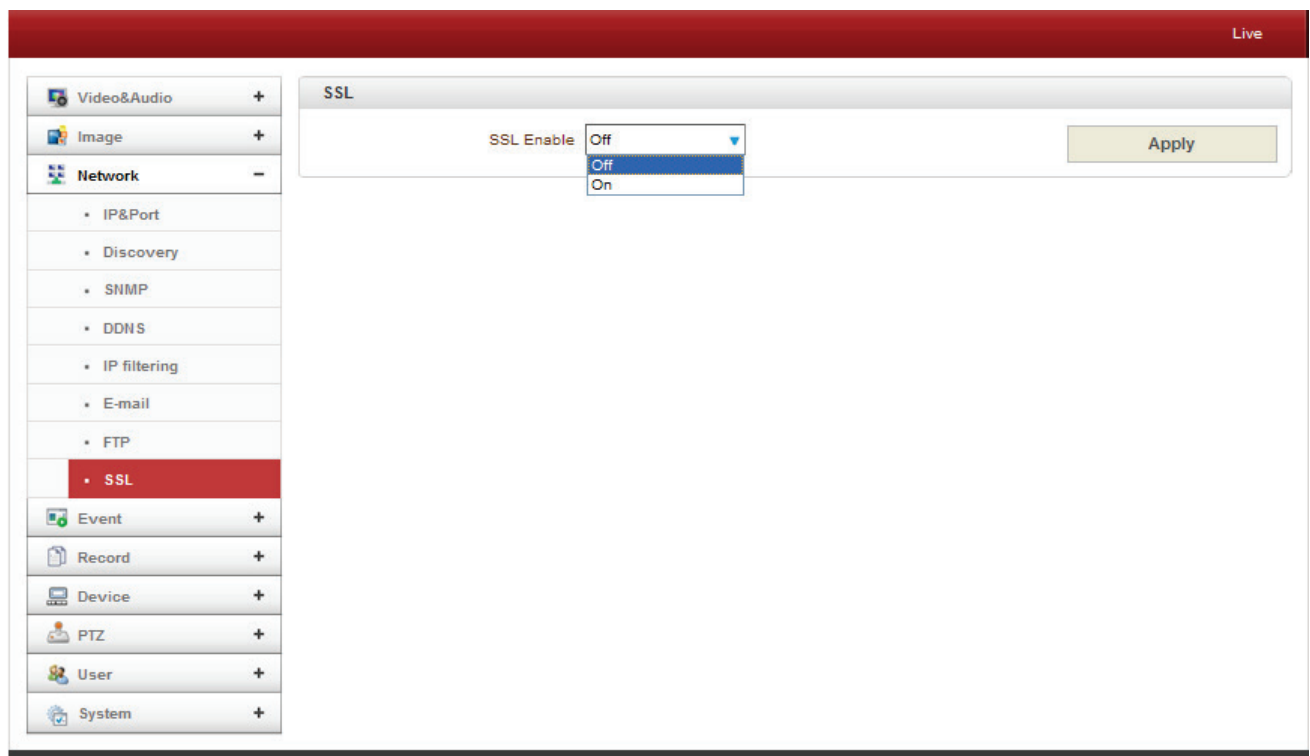

This function is applicable when the E-mail server requires encryption for sending E-mail.

Event

Notification

Video&Audio +

Image +

Network +

Event -

Notification

Motion Detection

Sensor

Alarm

Record +

Device +

PTZ +

User +

System +

Local

Sensor 1	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 2	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 3	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 4	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
On Video Loss	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
On Motion	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼

Remote

Sensor 1	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 2	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 3	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
Sensor 4	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼

On Disconnect

On Disconnect	Beep	Alarm1	Alarm2	E-mail	FTP	Preset	No Preset ▼
---------------	------	--------	--------	--------	-----	--------	-------------

Apply

- **Local**

When a decoder instead of a PC client is connected to an IP camera, one system becomes a Local system and the other a Remote system (Generally a system which is being used by the user is called as Local system). Then, actions for events can be configured for events from the remote system as well as for local system.

For example, it is possible to turn on an alarm device in local (center) decoder system when a sensor device in remote (site) IP camera is triggered. **Local** section configures the actions for events from local (self) system, and configuration activates local devices and **Remote** sections configure the actions for events from remote (peer) system.

The following table lists the possible actions for events.

Action	Description
Alarm out	Triggers alarm (relay) port.
E-mail	Sends E-mail to the specified address. AVI file can be attached.
FTP	Upload AVI file to a specified FTP server
Preset	Move to the Preset position

- **Local & Remote Event Configuration**

- **Sensor**

- Configure the action when the sensor is activated. Multiple actions can be set for a single event.

- **On Video Loss**

- Configure the actions when the video input signal is lost. Multiple actions can be set for a single event.

- **On Motion**

- Configure the actions motion is detected. Multiple actions can be set for a single event.

- **On Disconnection**

Configure the action when link (connection) with peer system is disconnected. Multiple actions can be set for a single event.

Motion Detection


- **Use Motion Detection**

Determine to use **Motion Detection** function.

- **Motion Detection Area Editing**

Configure region for motion detection. Regions of arbitrary shape can be configured by the following steps;

- I. Select **Enable** on **Edit** tab.
- II. Select editing mode. **Set** is for including cells to motion detection region and **Erase** is for excluding.
- III. Select cells by right click. Multiple cells can be selected by press and dragging.
- IV. Press **Apply Edit Area** to save the setting.

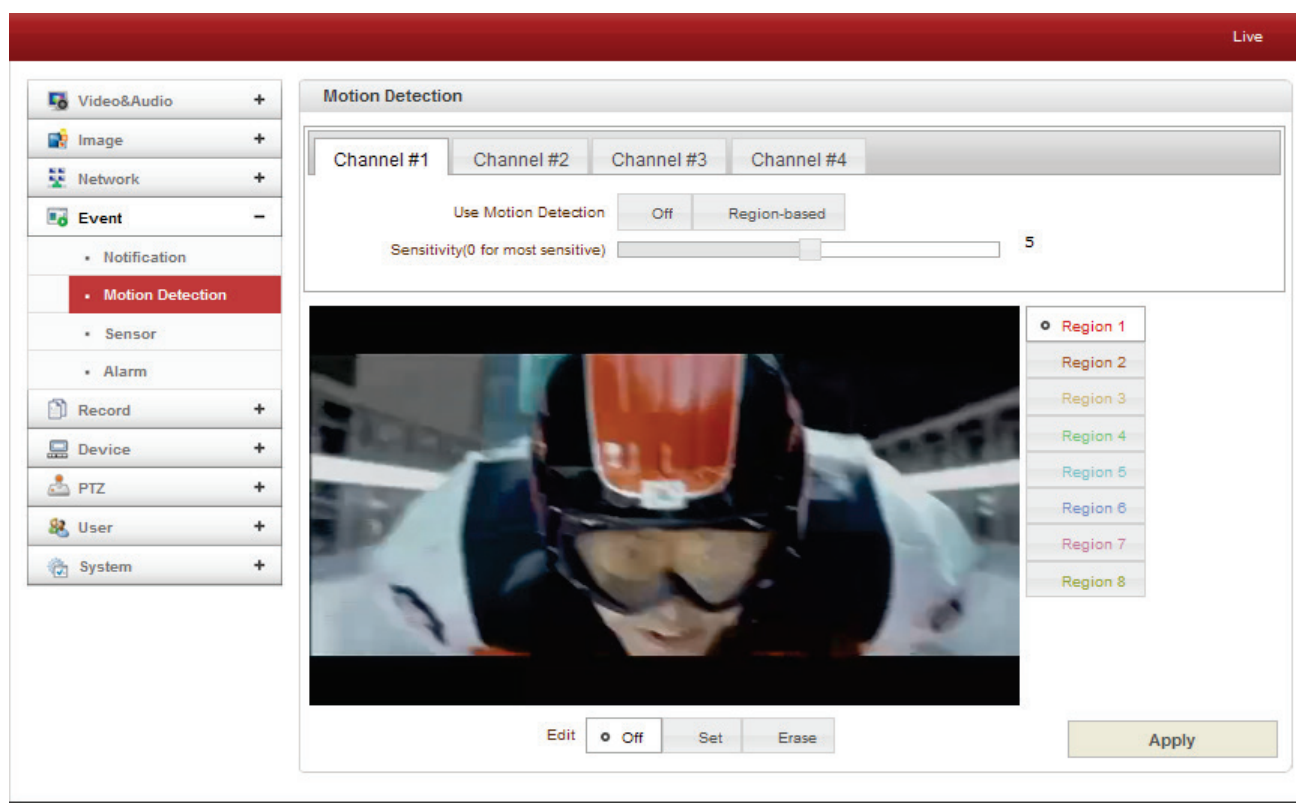

Sensor

LIVE

- Video&Audio +
- Image +
- Network +
- Event -
- Notification
- Motion Detection
- Sensor**
- Alarm
- Record +
- Device +
- PTZ +
- User +
- System +

Sensor Type

Sensor 1	Off	<input checked="" type="radio"/> N/O	N/C
Sensor 2	Off	<input checked="" type="radio"/> N/O	N/C
Sensor 3	Off	<input checked="" type="radio"/> N/O	N/C
Sensor 4	Off	<input checked="" type="radio"/> N/O	N/C

Sensor Schedule

Select

☒ Sensor Disable
 ☐ Sensor Enable

Sensor 1

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								

Sensor 2

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								

Sensor 3

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								

Sensor 4

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								

- **Sensor Type**

There are two sensor input ports on video server. Each of the sensor ports can be configured to the followings;


Function	Operation
OFF	Not used.
NO (Normally Open)	The port is normally open and activated when closed.
NC (Normally Closed)	The port is normally closed and activated when opened.

The function of the sensor port is set based on the type of the sensor connected.

- Sensor Schedule

Choose **Sensor OFF** or **Sensor On** and click the below schedule table to make a sensor schedule according to day of week and hours.

Alarm

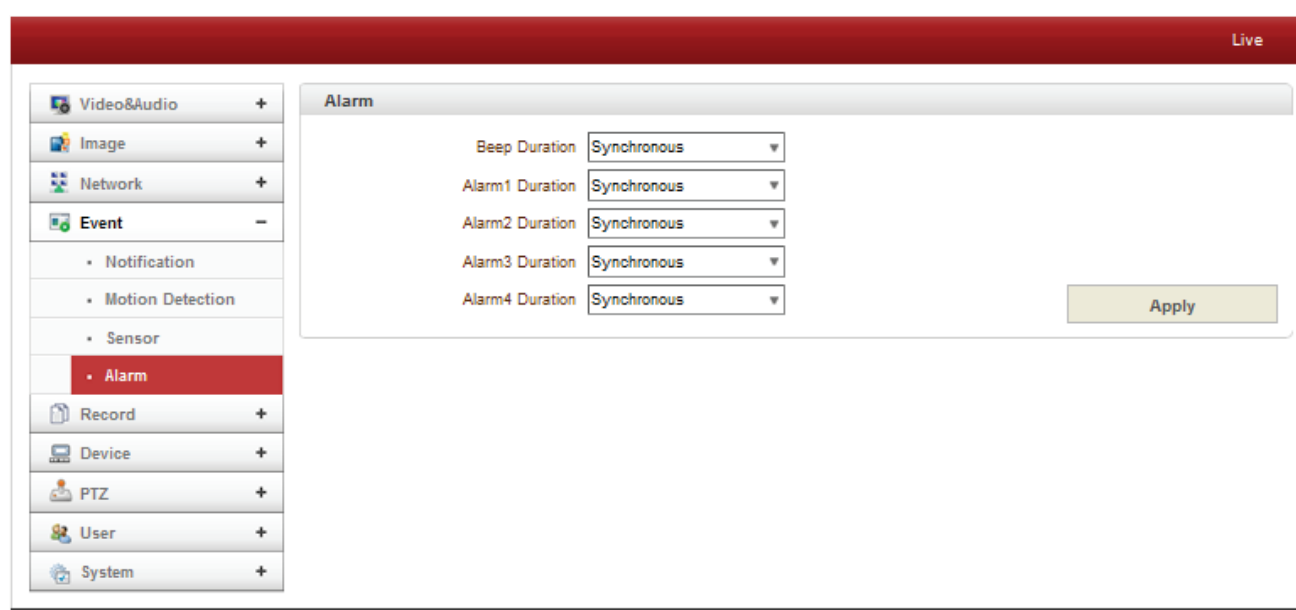

The screenshot shows a software interface with a red header bar labeled "Live" in the top right corner. On the left is a vertical sidebar menu with icons and labels: "Video&Audio", "Image", "Network", "Event", "Notification", "Motion Detection", "Sensor", "Alarm" (highlighted in red), "Record", "Device", "PTZ", "User", and "System". The main area on the right is titled "Alarm" and contains five rows of settings, each with a label and a dropdown menu:


Setting	Value
Beep Duration	Synchronous
Alarm1 Duration	Synchronous
Alarm2 Duration	Synchronous
Alarm3 Duration	Synchronous
Alarm4 Duration	Synchronous

An "Apply" button is located at the bottom right of the "Alarm" configuration area.

Set the duration of alarm activation in case of an event. If it is set to continuous, it will be in active until an operator reset it manually.

Record

General

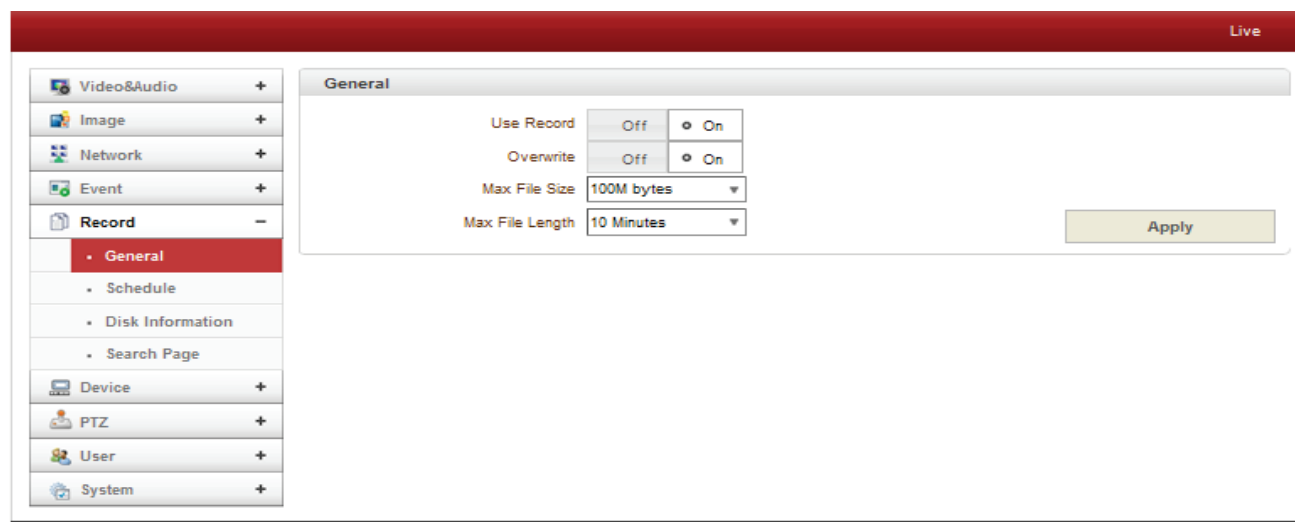

- Use record
 - Off: Recording function will not be used when “OFF” is selected.
 - On: Use disk function will follow the setting of Schedule table which set as record off as a default.
- Max File Size / Max File Length

Max File Size option is for limiting the size of AVI file. If small file size is set, files of small size will be generated but numbers of the files will be increased. Max File Length option is for limiting the time length of AVI file. If the size of a file becomes Max File Size or the duration of the recording reaches Max File Length, a new file is created.

Checking status of recording

Recording status can be checked on the main view page.



Schedule

Live

- Video&Audio +
- Image +
- Network +
- Event +
- Record -
 - General
 - Schedule**
 - Disk Information
 - Search Page
- Device +
- PTZ +
- User +
- System +

Event Type

Event Type 1	<input checked="" type="checkbox"/> Sensor1	<input type="checkbox"/> Sensor2	<input type="checkbox"/> Motion	<input type="checkbox"/> Video Loss
Event Type 2	<input type="checkbox"/> Sensor1	<input checked="" type="checkbox"/> Sensor2	<input type="checkbox"/> Motion	<input type="checkbox"/> Video Loss
Event Type 3	<input type="checkbox"/> Sensor1	<input type="checkbox"/> Sensor2	<input checked="" type="checkbox"/> Motion	<input type="checkbox"/> Video Loss
Event Type 4	<input type="checkbox"/> Sensor1	<input type="checkbox"/> Sensor2	<input type="checkbox"/> Motion	<input type="checkbox"/> Video Loss

Pre-event Time:

Post-event Time:

Schedule Table

Select: ☒ Record Off ☐ Continuous ☐ Disconnect

Event Type1
Event Type2
Event Type3
Event Type4

Channel #1 Channel #2 Channel #3 Channel #4

Select Video:

	0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23
SUN																								
MON																								
TUE																								
WED																								
THU																								
FRI																								
SAT																								


- **Event Type**
 Three recording modes are supported: Continuous, Event, Disconnect. In case of Event recording, event types can be selected among several events. Selected event type is used for configuring the schedule table. Up to 4 event types can be configured and each event type can be a combination of sensor, video loss and motion event.
 - Pre-event Time
Specify the duration of recording before an event happens.
 - Post-event Time
Specify the duration after the event is cleared.

- **Schedule Table**
 Actual recording mode is determined by **Schedule Table**, where recording mode configured by day (of a week) and hour.
 Each of recording modes configures the recording operation as follows:
 - Record Off
No Recording.

- Continuous
Records continuously.
- Disconnect
Recording is started when the system loses the connection to its last client (Decoder, VMS/NVR) etc. When there are multiple clients and one of the clients is disconnected, this doesn't happen.
- Event Type
Records when an event configured in Event Type setting happens.

Disk Information

SD memory can be used, and at least 1GB size is recommended. Either EXT3 or FAT32 file system can be used. A disk with either EXT3 or FAT32 file system can be read in Linux PC. However, only disk with FAT32 file system can be read in Windows PC. Less than 4Mbps of video bit rate is recommended when you record and monitor video simultaneously since frame dropping may happen due to performance limitation.

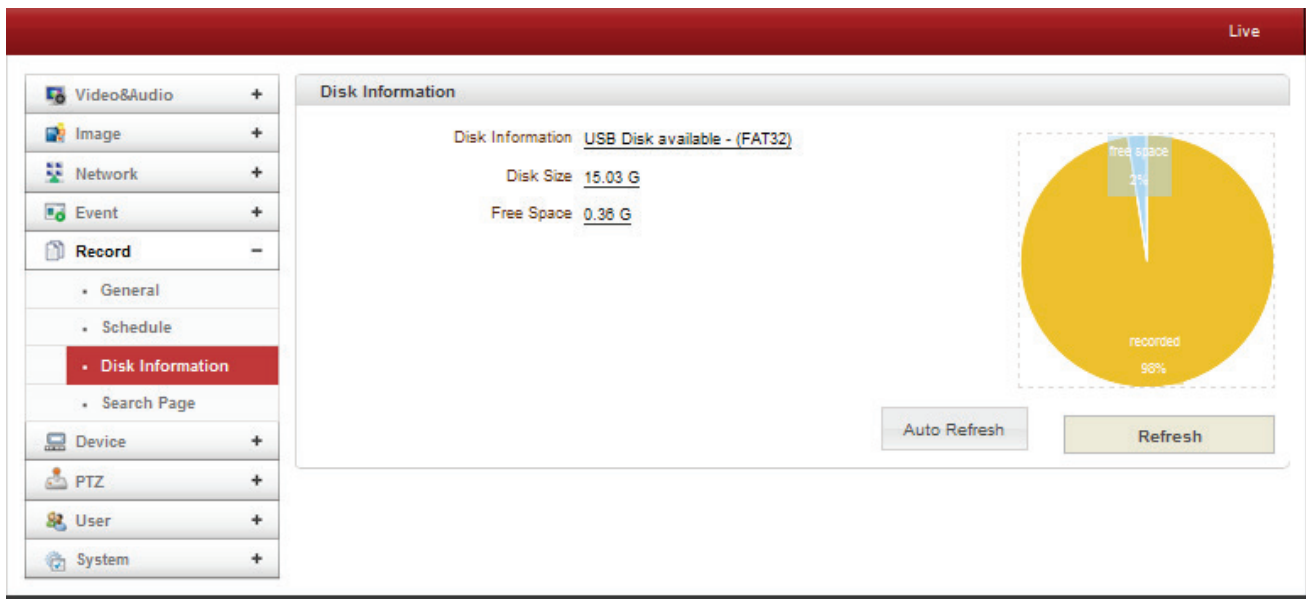

Be sure to restart the system after connecting an SD card. During booting, the system reads status of disk and initializes it. Once the initialization of a disk is finished, the status of disk is shown on **Record** page of web-based setup.

Refer to the chart for checking the status of disk.

Disk status↕	Description↕
Disk error detected↕	Error↕
No disk ↕	Disk is not connected to the system.↕
Searching Disk information↕	Checking the status of disk. Refresh the page and wait until the status is changed.↕
Mounting and ↕ Recovering Disk...↕	Performing recovery process when disk damage is found. It takes from seconds to minutes for recovering.↕
Disk format needed ↕	Disk is attached, but the type of the file system is unknown or damaged.↕
Unknown disk type detected ↕	
USB Disk available↕	Available to be used for recording↕
Disk removed ↕ or in abnormal state↕	Disk is detached during operation or there is damage on the file system. If it happens while disk is connected, it is recommended to format the disk. ↕

Search Page

live

Video&Audio +

Image +

Network +

Event +

Record -

General

Schedule

Disk Information

Search Page

Device +

PTZ +

System +

User +

Search Page

2013_07_16

2013_07_09

2012_10_29

⏮

⏪


(1)

⏩

⏭


Recorded video and audio data can be saved as AVI format in the disk. In general, one AVI file is created for


an event in case of event-based recording. However, it is possible that recorded data by serious of events happening continuously can be merged to a single AVI file depending on pre/post event time setting. The size of file is limited to 10 ~ 2GB. In case of continuous recording, AVI files are created in series and the size of each is limited to 10 ~ 2GB.

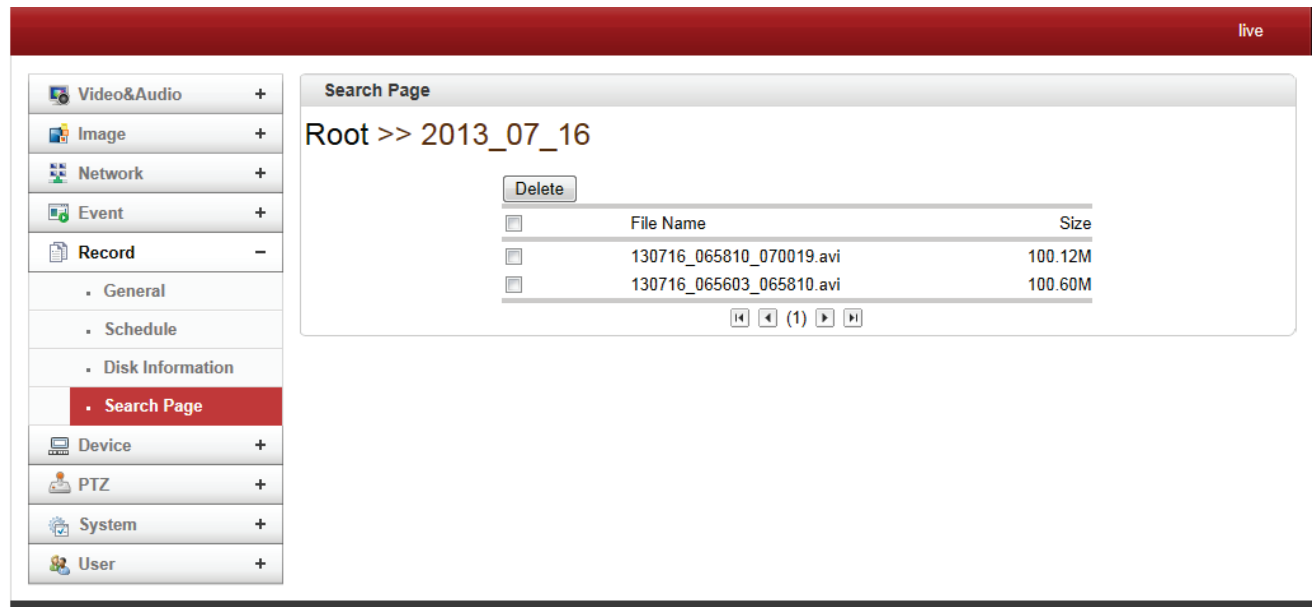

- **Playback**

1. Selecting an AVI file will show a dialog for opening or saving the file.
2. Pressing **Save** button, the file will be stored in the PC. The AVI file can be played with Windows Media Player.

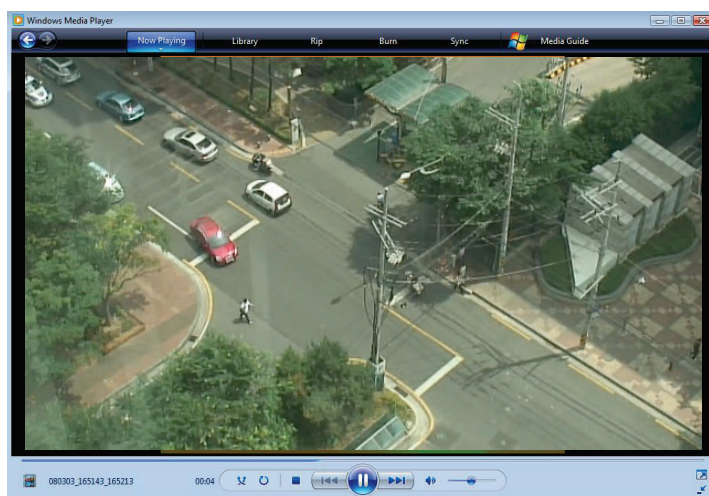


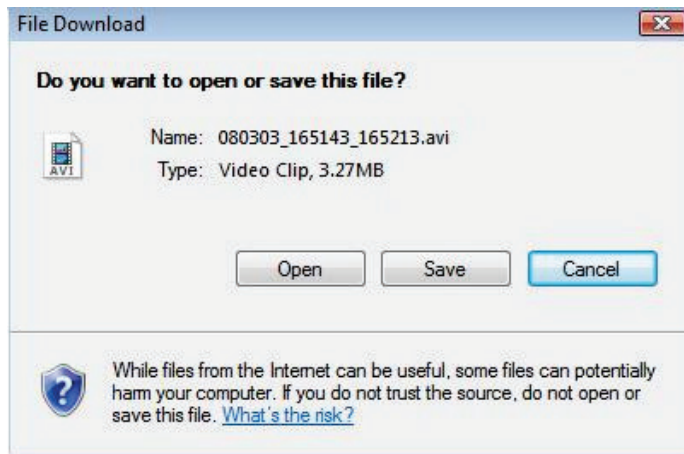

3. If you press **Open** in the dialog, the file will be downloaded and played automatically with Media Player.
4. Another connection through web is disabled during downloading and it is also not allowed to download two AVI files at the same time.

Device

Information

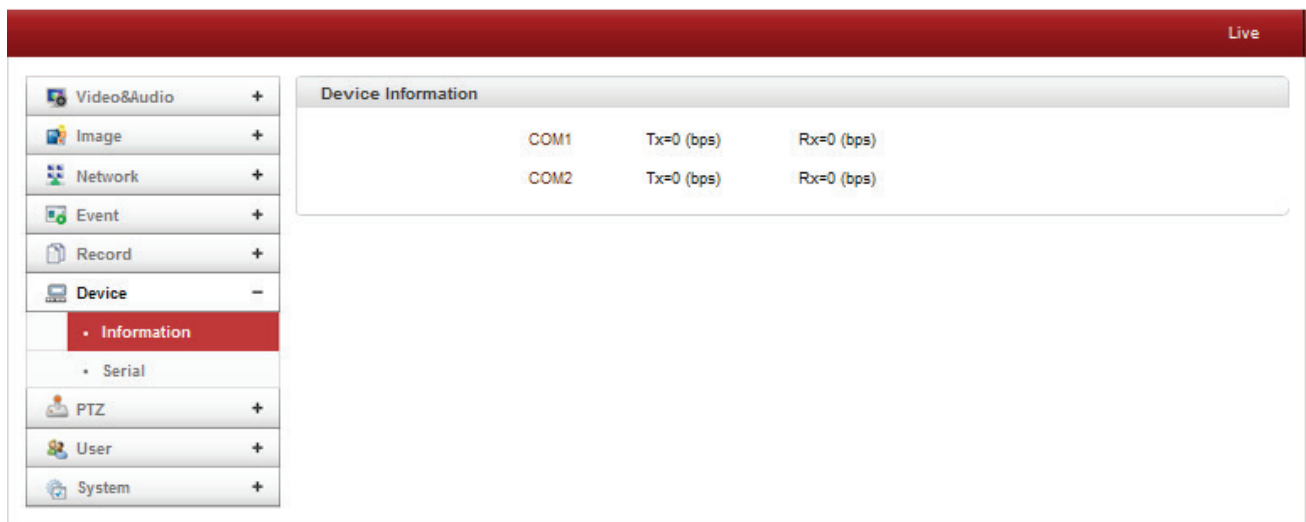

The information provides current serial communication status.

Serial

The screenshot displays a web-based configuration interface for serial ports. On the left is a sidebar menu with categories: Video&Audio, Image, Network, Event, Record, Device, Information, Serial (highlighted), PTZ, User, and System. The main area is divided into two sections: COM1 (RS-232 Port) and COM2 (RS-422/485 Port). Each section contains dropdown menus for Protocol, Bitrate, Data Bit, Parity, and Stop Bit. The COM2 section also includes a 485 Terminating Resistors dropdown. An 'Apply' button is located at the bottom right of the configuration area.

Section	Protocol	Bitrate	Data Bit	Parity	Stop Bit	485 Terminating Resistors
COM1 (RS-232 Port)	RS-232	9600 bps	8 Bits	None	1 Bits	
COM2 (RS-422/485 Port)	RS-485	2400 bps	8 Bits	None	1 Bits	Off

- **Serial Protocol**

This camera supports one RS-485 serial port.

- **Serial Port Configuration**

The serial ports can be configured as follows;

Each of the serial ports configurations must be same as the connecting device.

Mode	Selection
Bitrate	2400, 4800, 9600, 19200, 38400, 57600, 115200 bps
Data Bits	5, 6, 7, 8 bits
Parity	NONE, EVEN, ODD bit
Stop Bit	1, 2 bit


PTZ

General

The screenshot displays a software interface for PTZ configuration. On the left is a sidebar menu with categories: Video&Audio, Image, Network, Event, Record, Device, PTZ, General (selected), Preset, User, and System. The main area is titled 'PTZ' and contains four tabs: Channel #1, Channel #2, Channel #3, and Channel #4. The 'Channel #1' tab is active, showing configuration fields for PTZ Type (set to Pelco-D), PTZ ID (set to 1), and PTZ Port (set to COM2). An 'Apply' button is located at the bottom right of the configuration area.

- **PTZ Type**
Select the type of PTZ camera or receiver.
- **PTZ ID**
Since it is possible to control multiple PTZ cameras or receivers over a single control line, each camera or receiver will be assigned with unique ID. Enter PTZ ID of a camera or receiver for control. The ID value range can be between 0 and 255.
- **PTZ Port**
Select the serial port for PTZ camera control.

Preset

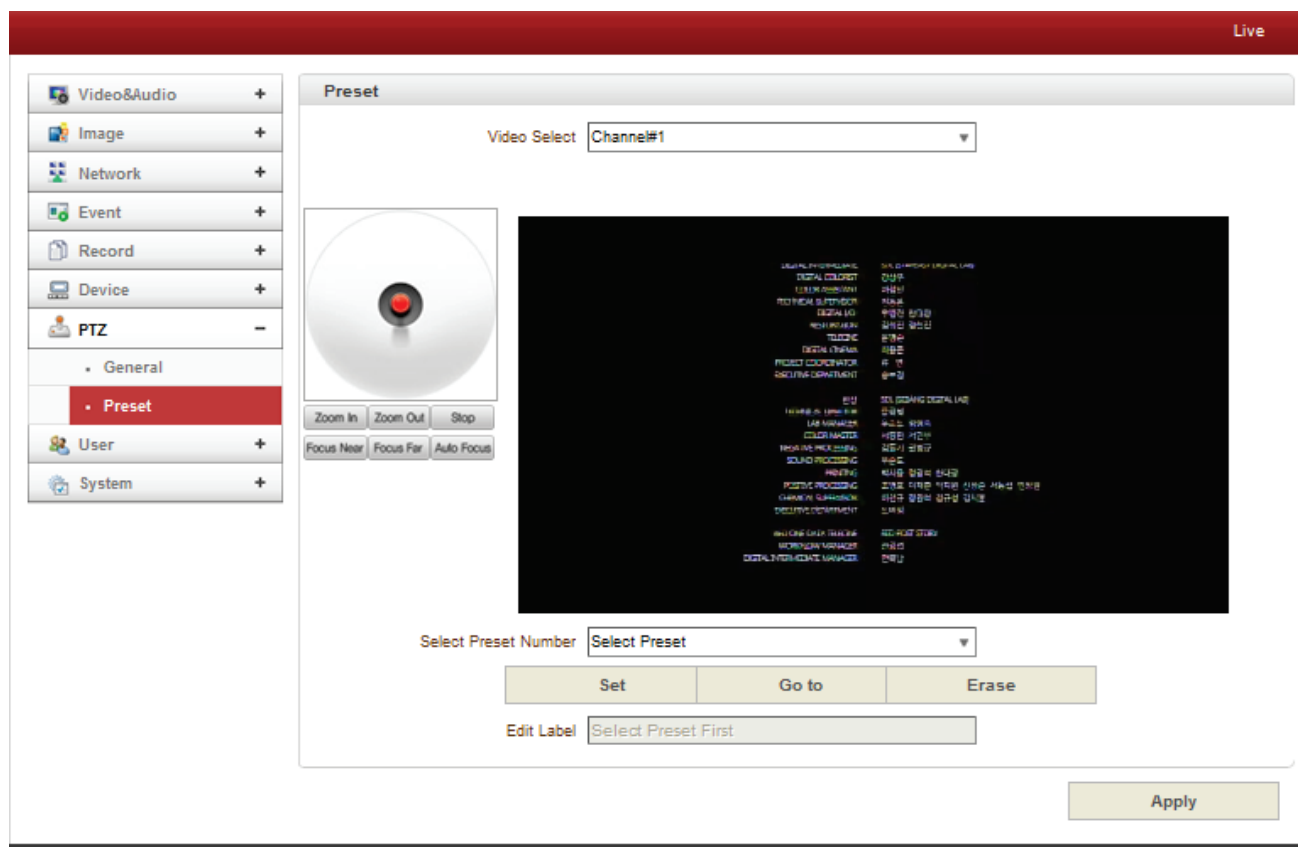


Max 128 preset positions can be defined.

- **Select Preset Number:** Select an entry in the list to be assigned to current camera position.
 - **Focus Mode:** Select the focus mode after preset Goto is executed.
 - Do not change: current focus mode is not changed.
 - Focus Auto: auto-focusing is executed after the preset moved.
 - Focus Manual: move to the focus position saved when preset set.
 - **Event Holding Time:** Set the time to stay at the preset position when the preset moved by event.
- Note! If it is set to 0, the camera doesn't return to original position after moving to the preset position by event.***
- **Edit Label:** Assign a label to the preset position. Only the first 15 preset entries (Preset-1 ~ Preset-15) can have labels.

User

User List

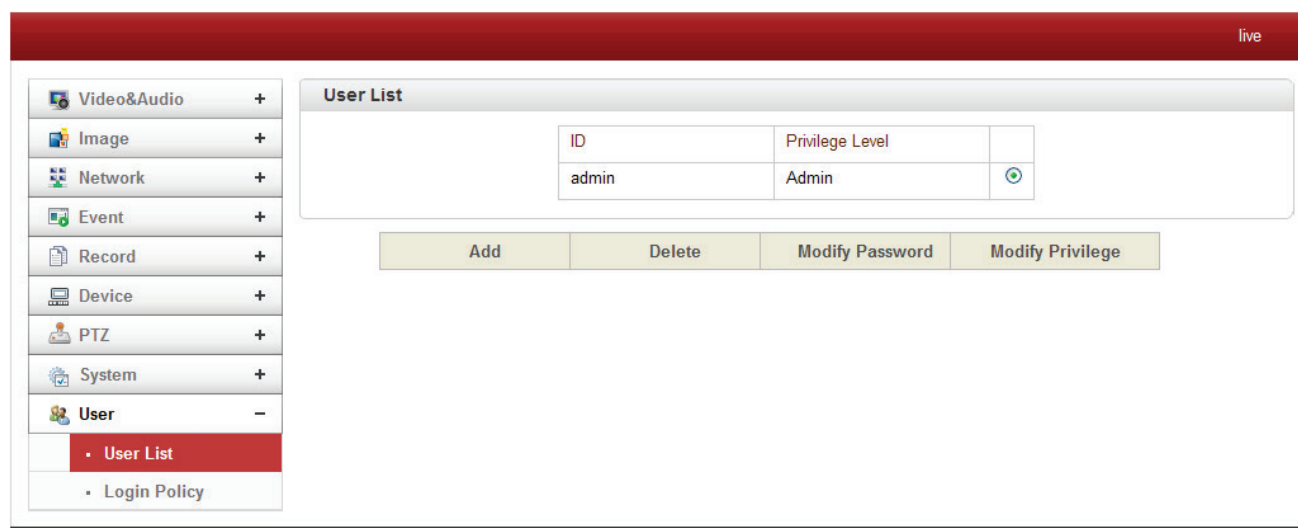


User can be registered and privilege level of a user can be specified. User configuration is allowed only to admin user. Max 16 users can be registered and each user can have one of four privileges.

Privilege	Allowed Operations	Remarks
Admin	All operations	User ID = admin
Manager	All operations except for user configuration	
User	Live viewing and PTZ control	
Guest	Live viewing only	

- **Add User**

Press **Add** button. The following window will appear.

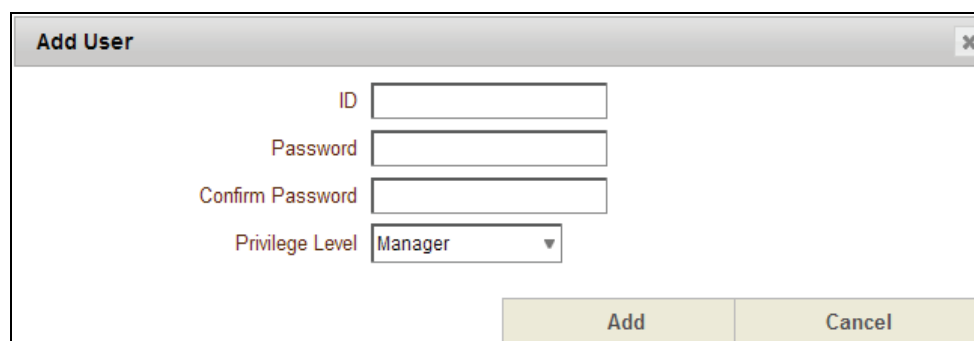


Enter User ID and password (Up to 15 characters) and select **Privilege Level**.

- **Delete User**

Select the User to be deleted and press **Delete** button.

- **Change Password**

Press **Modify Password** button. The following window will appear.

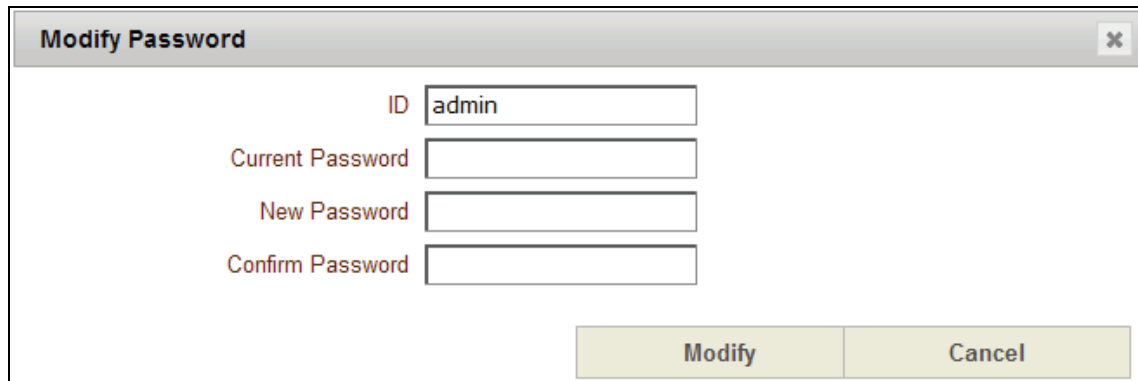


The 'Modify Password' dialog box contains the following fields and buttons:

- ID**: Text input field containing 'admin'.
- Current Password**: Text input field.
- New Password**: Text input field.
- Confirm Password**: Text input field.
- Modify**: Button.
- Cancel**: Button.

Enter the current password and then set a new password.

- **Modify Privilege Level**

Press **Modify Privilege** button to change User level. It is not allowed to change the privilege level of admin user.

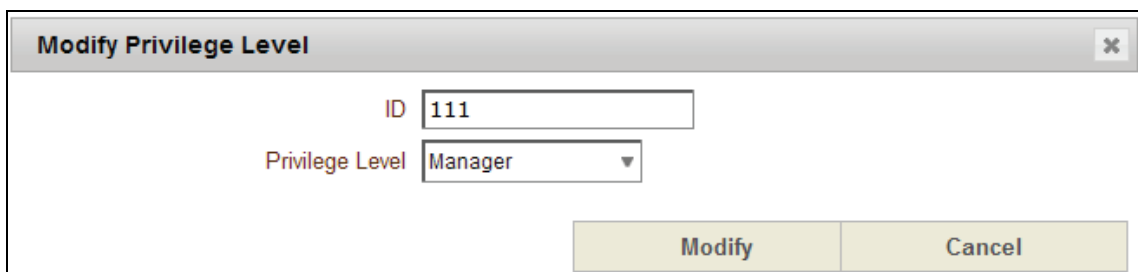

The 'Modify Privilege Level' dialog box contains the following fields and buttons:

- ID**: Text input field containing '111'.
- Privilege Level**: Dropdown menu showing 'Manager'.
- Modify**: Button.
- Cancel**: Button.

Login Policy

live

Video&Audio +

Image +

Network +

Event +

Record +

Device +

PTZ +

System +

User -

User List

Login Policy

Login Policy

Skip Login ☐ Disable ☒ Enable

Privilege Level After Login Skipped Admin

Apply

Authentication

RTSP Authentication ☒ Off ☐ On

Apply

- **Login Policy**

Skip Login provides for convenient access to the server when authentication is not required.

When Skip Login is set to **Enable**, login step is skipped. The privilege level after login in this way is determined by the setting of **Privilege Level After Login Skipped**.

- **Authentication**

HTTP authentication based on RFC 2617

(HTTP Authentication: Basic and Digest Access Authentication) is supported.

System

Information



- System information

Followed network information is displayed (Read only).

- **Model**

- Display the model name.

- **Version**

- Display the current firmware version.

- **Mac Address**

- Display the MAC address of the camera. In case the camera is registered at DDNS server, the MAC address is used in DDNS registration.


- **Set Current Time**

- Display Current date and time

- **Current Domain**


- In case the camera is registered at DDNS server, the registered domain name is displayed.

Maintenance

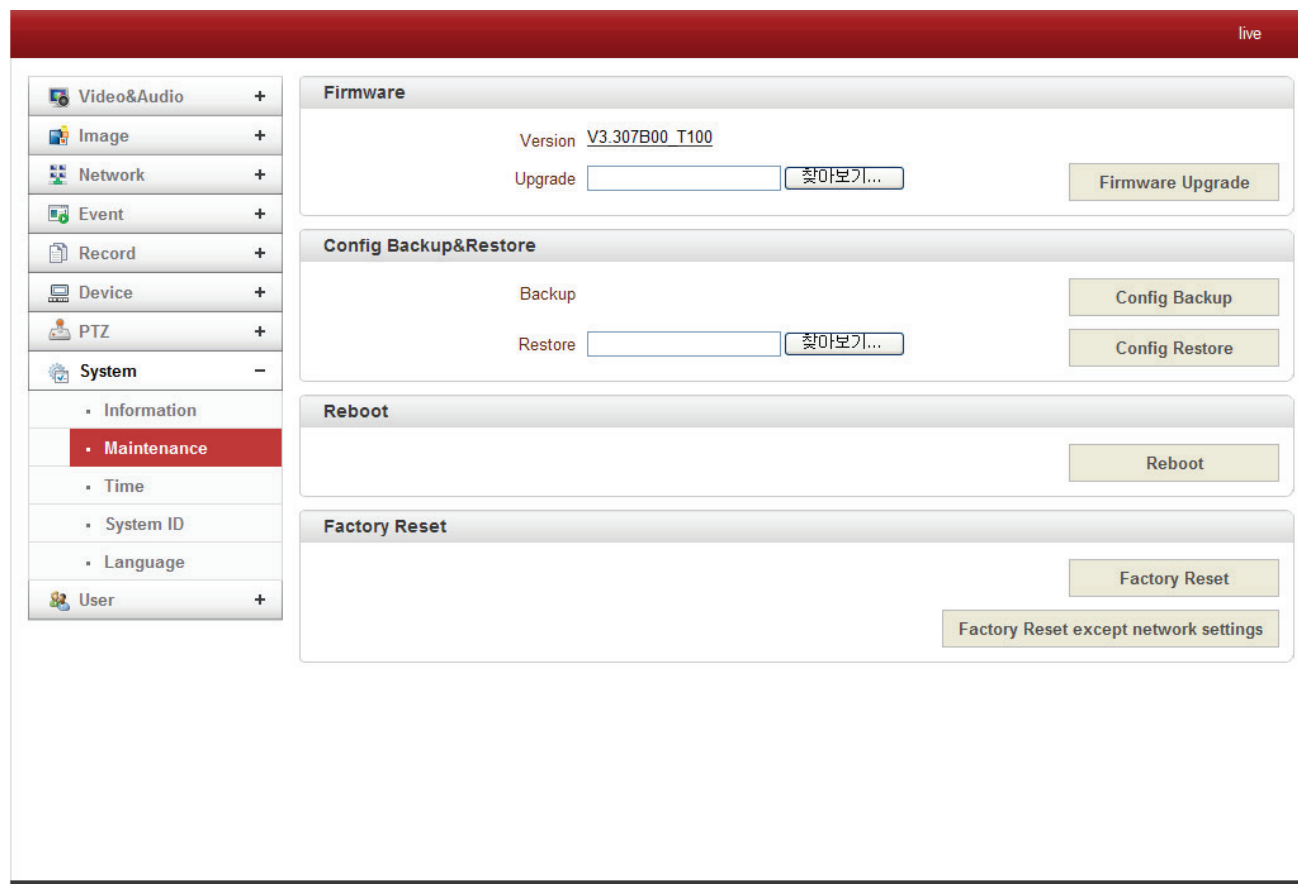

- Firmware
 - Version: Display the current firmware version.
 - Upgrade: To upgrade firmware;
 1. Press **Browse** button to select a firmware file from PC.
 2. Press **Firmware Upgrade** button to start upgrading.
 3. A message for showing status (downloading / upgrading) will be displayed.
 4. The camera will reboot automatically after completing upgrade.

Note! Do not turn the camera off during upgrading.

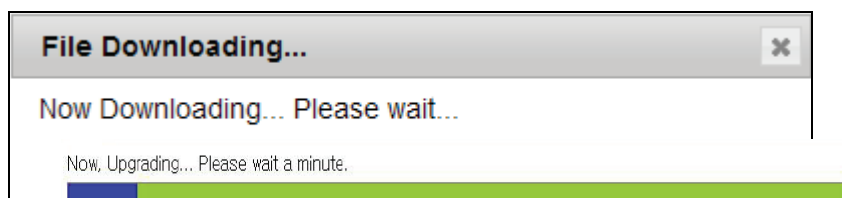

- Config Backup & Restore
 - Backup
All the setting of configuration can be stored.
 - Restore
Stored configuration can be browsed and restored.
The server is rebooted once **Config Restore** button is pressed.
- Reboot
 - Reboot the camera
Do not press the Reboot button unless the server needs a reboot.
- Factory Reset
All settings including user accounts and logs are cleared
- Factory Reset Except Network Settings
All settings except for current network settings are changed to the default values.

Time

live

Video&Audio +

Image +

Network +

Event +

Record +

Device +

PTZ +

System -

- Information
- Maintenance
- Time**
- System ID
- Language

User +

Time

Start Time 2013/07/10 3:45:57

Current Time 2013/07/10 11:07:58

Set time 2013/07/10 11 : 7 : 53 Set Current Time

Time Format YYYY/MM/DD hh:mm:ss

Time Zone (GMT+09:00) Seoul

☐ Automatically synchronize with NTP server

NTP Server Name pool.ntp.org Apply

- Start Time
The latest the camera's booting date and time.

- **Current Time**

Current date and time.

Enter a new date and time then press **Set Current Time** button to update date & time.

- **Time Format**

Change the time format. The selectable time formats are as below;

- I. YYYY/MM/DD hh:mm:ss (Eg. 2012/10.30 12:30:45)
- II. DD/MM/YYYY hh:mm:ss (Eg. 10/30/2012 12:30:45)
- III. MM/DD/YYYY hh:mm:ss (Eg. 30/10/2012 12:30:45)

- **Time Zone**

Select time zone of where the camera is installed.

Depending on the time zone, Daylight Saving Time will work automatically

A **time zone** is a region of the earth that has uniform standard time, usually referred to as the **local time**. By convention, time zones compute their local time as an offset from UTC (Coordinated Universal Time). In casual use, GMT (Greenwich Mean Time) can be considered equivalent to UTC. Local time is UTC plus the current time zone offset for the considered location

- **Automatically synchronized with NTP server**

Synchronize the camera time with an NTP server using NTP (network time protocol).

Name of the NTP server should be registered on NTP server Name.

The **Network Time Protocol (NTP)** is a protocol for synchronizing the clocks of computer systems over packet-switched, variable-latency data networks. It is designed particularly to resist the effects of variable latency by using a jitter buffer.

System ID

Live

Video&Audio +

Image +

Network +

Event +

Record +

Device +

PTZ +

User +

System -

- Information
- Maintenance
- Time
- System ID**
- Language

System ID

System ID TCS-410

Information Display

SystemID ☒ Off ☐ On

Time ☒ Off ☐ On

Position ☒ Bottom ☐ Top

Burn-in OSD

Channel #1 Channel #2 Channel #3 Channel #4

SystemID ☒ Off ☐ On

Time ☒ Off ☐ On

Position ☒ Bottom ☐ Top

Font Size 12x12

Apply

- **System ID**

Enter System ID that is used as a camera title.

The set System ID is displayed with video image on a Web Browser. The System ID is also transferred to remote software, such as VMS, and displayed on it.

- **Information Display**

System ID and/or server time can be display over the video window in Internet Explorer. Each item can be turn on or off separately, and position also can be configured. This information is displayed **after the video is decompressed**.

- **BurnIn OSD**

Insert system ID and date/time **in the compressed video**. System ID and time respectively can be turned on or off in the video. Position and Font size can be configured also. System ID for BurnIn OSD exists independently from normal System ID.

Note! Size of Burnin OSD display varies according to the encoding resolution setting.

This is inevitable because Burnin OSD is inserted to the frames before encoding is performed.

The following table describes the rule for BurnIn OSD display.

Resolution↕	Small (8x8)↕	Middle (16x16)↕	Large (32x32)↕
352x480 / 352x240 / 352x576 / 352x288↕	2↕	1↕	0↕
720x480 / 720x240 / 720x576 / 720x288 /↕ 640x480 / 800x600↕	2↕	2↕	1↕
1024 x 768 / 1280x720 / 1280 x 960 / 1280x1024 / 1440x900 / 1600x900 / 1680x1050 / 1920x1056 / 1920x1080 / 2048x1536 / 2560x1600 / 2592x1936↕	2↕	2↕	2↕

- 2 : Both System ID and Time are displayed.
- 1 : Either System ID or Time can be displayed. When both are enabled, System ID is displayed.
- 0 : No items are displayed. This is because video area is too small to display OSD text in large text.


- **User defined OSD**

You can enter any text you like independent.

- X-Coordinate or Y-Coordinate.

For example, if you enter 500, 500 values, OSD is placed in center of images.

Language

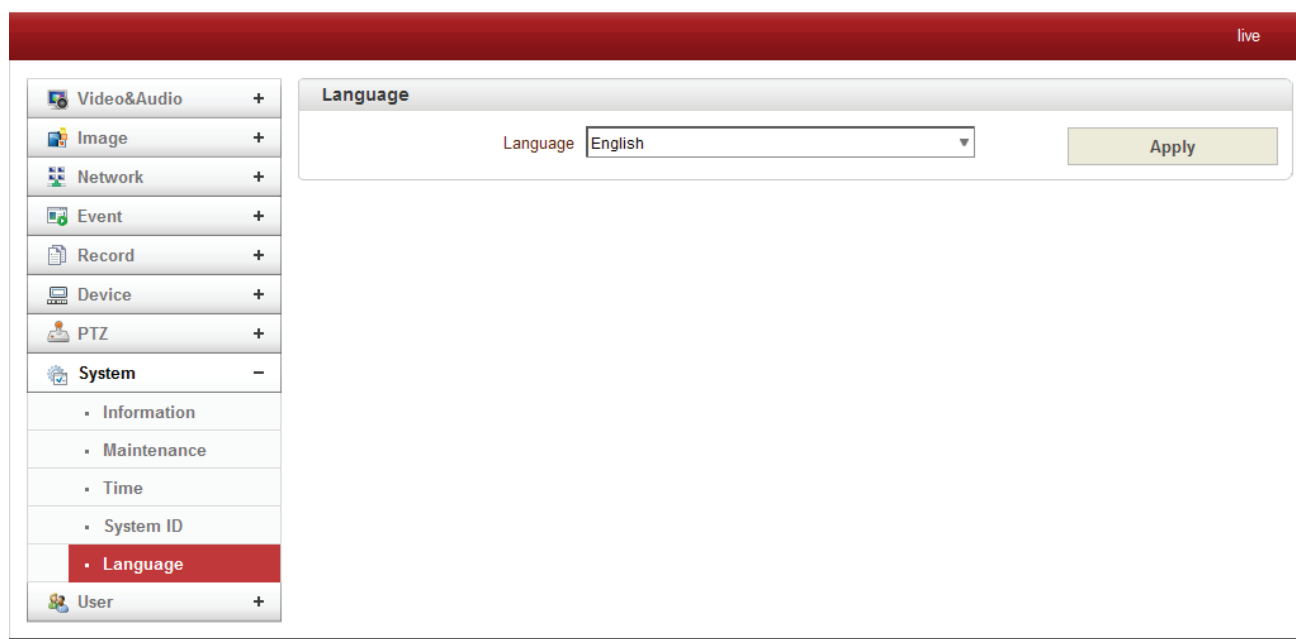

- **Language**
Select the language to be used for web-based configuration.

Legal Declarations

Copyright © 2014 Teleste Corporation. All rights reserved.

TELESTE is a registered trademark of Teleste Corporation. Other product and service marks are property of their respective owners.

This document is protected by copyright laws. Unauthorized distribution or reproduction of this document is strictly prohibited.

Teleste reserves the right to make changes to any of the products described in this document without notice and all specifications are subject to change without notice. Current product specifications are stated in the latest versions of detailed product specifications.

To the maximum extent permitted by applicable law, under no circumstances shall Teleste be responsible for any loss of data or income or any special, incidental, consequential or indirect damages howsoever caused.

The contents of this document are provided "as is". Except as required by applicable law, no warranties of any kind, either express or implied, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose, are made in relation to the accuracy, reliability or contents of this document.

Teleste reserves the right to revise this document or withdraw it at any time without notice.



Teleste Corporation
P.O. Box 323
FI-20101 Turku
Street address: Telestenkatu 1, 20660 Littoinen
FINLAND

www.teleste.com

TELESTE

www.teleste.com